

ASSA ABLOY IP READERS

FOR WIFI & POE READER INTEGRATION



System Galaxy ASSA ABLOY IP Reader Guide

Integrating System Galaxy with
WIFI & POE READERS
using **GCS ASSA SYNC** Program

Information in this document is subject to change without notice.
No claims are made as to the accuracy or completeness of this document.

This document describes how to install and configure IP readers into the System Galaxy database and install the GCS ASSA SYNC program.

This guide does not supersede the manufacturer's documentation for 3rd Party products or systems not manufactured by Galaxy Control Systems.

2nd edition JAN 2018

Copyright © 2018 ♦ Galaxy Control Systems ♦ All rights reserved

No part of this document may be reproduced, copied, adapted, or transmitted, in any form or by any means, electronic or mechanical, for any purpose, without the express written consent of Galaxy Control Systems. Copyright protection claims include all forms and matters of copyrighted material and information, including but not limited to, material generated from the software programs, which are displayed on the screen such as icons, look and feel, etc.

Microsoft®, Windows®, MS-DOS®, SQL Server®, and Windows Server System®, are registered trademarks of the Microsoft Corporation in the U.S. and other countries.

ASSA ABLOY, Sargent, Corbin Russwin, HID, iClass, are trademarks and/or registered trademarks of their respective owners. Adobe® and Acrobat® are registered trademarks of Adobe Systems Inc.

Technical illustrations are creations of the technical author.

Galaxy Control Systems

3 North Main Street
Walkersville MD 21793
301-845-6600

www.galaxysys.com

Table of Contents

1	INTRODUCTION TO THE ‘GCS ASSA SYNC’ PROGRAM	5
1.1	OVERVIEW OF ASSA IP READER INTEGRATION USING ‘GCS ASSA SYNC’	6
2	SYSTEM RECOMMENDATIONS	7
2.1.1	GENERAL INSTALLATION RECOMMENDATIONS.....	7
2.1.2	ASSA INSTALLATION RECOMMENDATIONS	7
2.1.3	MANUALLY UPDATING IP READERS BEFORE SCHEDULED UPDATES	7
2.1.4	SYSTEM GALAXY CONFIGURATION RECOMMENDATIONS.....	8
2.1.5	ENROLLING AND AUTHORIZING CREDENTIALS VIA SYSTEM GALAXY.....	9
2.1.6	GCS ASSA SYNC PROGRAM REQUIREMENTS.....	9
3	INSTALLING THE ASSA DSR APPLICATION & DATABASE	10
4	INSTALL THE ASSA CONFIG TOOLS	16
4.1	INSTALLING THE ASSA CONFIGURATION TOOLS	16
4.2	CONFIGURING THE NETWORK SETTINGS OF EACH LOCK	18
4.3	ADDING A LOCK TO THE ASSA DATABASE.....	20
4.4	VIEWING THE LOCK WITH THE DSR SUPPORT TOOL.....	23
5	INSTALLING THE ‘GCS ASSA SYNC’ PROGRAM.....	24
6	GCS ASSA SYNC FUNCTIONALITY	27
6.1	GCS ASSA SYNC PROGRAM FUNCTIONALITY	27
6.2	LONG DESCRIPTION OF THE GCS ASSA SYNC PROGRAM PERFORMANCE	28
6.3	EXAMPLE OF LOG OUTPUT	29
7	SCHEDULING THE GCS ASSA SYNC EXECUTION.....	30
7.1	RUNNING ‘GCSSYNC.EXE’ APPLICATION MANUALLY.....	30
7.2	CREATING A WINDOWS TASK SCHEDULE TO RUN ‘gcssync.exe’	32

8 CONFIGURING THE SYSTEM GALAXY (SG) HARDWARE 35

8.1 LAUNCHING SYSTEM GALAXY CLIENT SOFTWARE 35

8.2 ADDING THE ‘ASSA ABLOY IP READER’ TYPE TO SYSTEM GALAXY..... 36

8.3 ADDING THE ‘DUMMY’ LOOP/CLUSTER IN SYSTEM GALAXY..... 37

8.4 ADDING THE ‘DUMMY’ CONTROLLER AND DPI BOARDS IN SYSTEM GALAXY.. 38

8.5 CONFIGURING THE READER PROPERTIES IN SYSTEM GALAXY..... 39

8.6 ADDING A “TEST CARD” IN SYSTEM GALAXY..... 40

8.6.1 METHODS OF CAPTURING A TEST CARD CREDENTIAL IN SYSTEM GALAXY 40

8.6.1.1 CAPTURING A TEST CARD (CARD CODE) FROM A ‘NOT IN SYSTEM’ EVENT:.....41

8.6.1.2 CAPTURING A TEST CARD (CARD CODE) FROM AN ENROLLMENT READER:.....41

8.6.1.3 MANUALLY ADDING A CREDENTIAL (CARD CODE – OR – KEYPAD CODE):42

9 ABOUT ADDING & REMOVING ACCESS FROM CARDS / USERS..... 45

1 INTRODUCTION TO THE ‘GCS ASSA SYNC’ PROGRAM

This addendum covers how to install and use Galaxy’s **GCS ASSA Sync Program**. Also included are basic tips for installing and configuring the ASSA DSR Application/WEB API & Database, as it relates to interfacing with System Galaxy.

This document includes the following:

- ▶ Overview of the integration
- ▶ **Requirements and Recommendations**
- ▶ Installing the ASSA ABLOY DSR Software and ASSA Database
- ▶ Overview of ASSA ABLOY network and lock Config tools
- ▶ Installing Galaxy’s GCS ASSA SYNC program
- ▶ Scheduling the GCS ASSA SYNC program with the Windows Task Scheduler
- ▶ Configuring the hardware into the System Galaxy database
- ▶ Basic information on enrolling a card/credentials into the System Galaxy database

SUPPORTED CARD TECHNOLOGIES

<i>Card Format Supported by Readers:</i>		<i>Technology selected when enrolling in Galaxy:</i>
HID Proximity - 26bit Wiegand	>	Enroll using “26bit Wiegand”
Keypad Code(not Card plus PIN)	>	Enroll using “ABA” standard format
Magnetic Stripe (Track 2)	>	Enroll using “Magnetic Stripe”
Corporate 1000	>	Enroll using “Corporate 1000”

SUPPORTED READERS

Sargent Reader Models

v.S1 Profile Series - Sx/POE
v.S2 Profile Series - Sx/WiFi
P1 Passport 1000 Series - Px/POE
P2 Passport 1000 - Px/WiFi
IN120 - WiFi

Corbin Russwin Reader Models

Access 800 IP1 - Sx/POE
Access 800 WI1 - Sx/WiFi
Access 700 PIP1 - Px/POE
Access 700 PWI1 - Px/WiFi
IN120 - WiFi

1.1 OVERVIEW OF ASSA IP READER INTEGRATION USING ‘GCS ASSA SYNC’

The **GCS ASSA Sync Program** provides data synchronization between the Galaxy database and ASSA database using MS SQL stored procedures.

The **GCS ASSA Sync Program** reads both databases, and inserts the access credentials into the ASSA Database that are **valid, active, AND** have **any level of access** to an ASSA IP Reader. Valid access is based on the enrollment (cardholder programming) in System Galaxy.

GCS ASSA Sync deletes credentials from the ASSA Database if they are not enrolled or do not have valid access in System Galaxy (i.e. card/user is **disabled, inactive, expired**, or is **not granted any level of access** to an IP Reader in SG database).


IMPORTANT: Credentials that have *scheduled access* in Galaxy will gain “24/7 access” to the intended ASSA Reader. Galaxy access schedules are not transferred to the ASSA Reader. Credentials are linked to the individual **Reader’s serial number**, so access is granted only to the reader that is chosen.

IMPORTANT: ASSA ABLOY IP Readers typically synchronize to the ASSA Database one time per day (based on scheduling) to preserve battery life. Galaxy recommends scheduling the **GCS ASSA Sync Program to run automatically at least one hour before the scheduled IP Reader synchronization to the ASSA Database.**

IMPORTANT: When user retracts an access card/credentials, steps should be taken to manually run the GCS ASSA Sync Program and then trigger a manual wake-up/synchronization for affected IP Readers.

GCS-ASSA Sync is designed to run on a scheduled basis, however, it can be run manually if needed.

1. *ASSA IP Readers* synchronize only ‘on wake-up’. To preserve battery life, *Wi-Fi Readers* may be set to wake-up only once a day.
2. *ASSA IP Readers* initiate their connection and synchronization with the **ASSA Database** to retrieve an updated list of valid access cards/credentials upon their scheduled wake-up for synchronization (see the reader manufacturer’s documentation for details that match your reader model).
3. *ASSA IP Readers* can be manually triggered to wake-up and synchronize using a ‘wake-up’ card or PIN command (see the reader manufacturer’s installation documentation for details that match your reader model).
4. **Using the GCS ASSA Sync Program, the ASSA readers only store the cards/credentials that have valid access at the time they synchronize.**

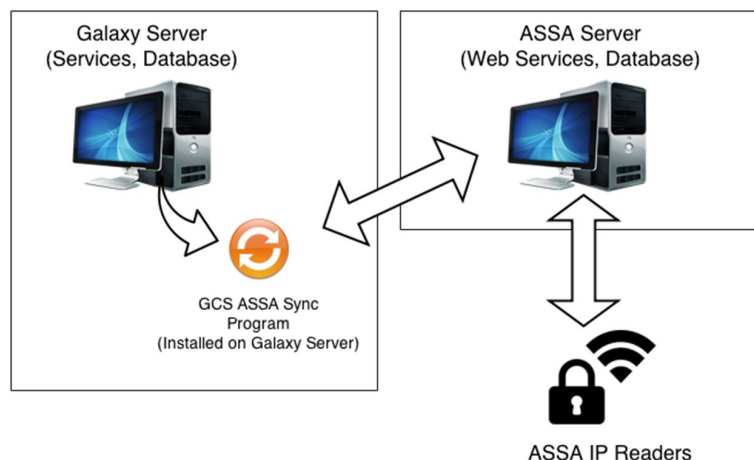

Due to potential performance demands of the ASSA DSR/Database, it is not recommended to install the ASSA Database on the Galaxy Database server or the Galaxy Communication server.

2 SYSTEM RECOMMENDATIONS

For convenience, this section lists the main recommendations for installing and using this 3rd Party Integration feature. Pertinent requirements may be restated in the relevant sections.

- ① IMPORTANT: This document may not supersede manufacturer's recommendations for 3rd Party products or does it disclose every ASSA or Lock manufacturer requirement. Installer should carefully follow the manufacturer's instructions.

2.1.1 GENERAL INSTALLATION RECOMMENDATIONS

1. This interface requires Internet/intranet connectivity to install and operate.
2. Port 8080 must be open on the network internally. This is an ASSA DSR/API requirement.

2.1.2 ASSA INSTALLATION RECOMMENDATIONS

1. Install ASSA components according to the ASSA installation documentation where provided.
2. IMPORTANT: During the installation of the ASSA DSR & Database Setup program, Galaxy recommends you install the MS SQL EXPRESS DSR Database when interfacing with the GCS ASSA Sync.
3. Install, configure and connect the ASSA IP readers according to the manufacturer's installation instructions for the model of readers you are using.

2.1.3 MANUALLY UPDATING IP READERS BEFORE SCHEDULED UPDATES

1. IF customer or end-user must **add** or **remove** a card, credential, or user from the IP READER before the next scheduled time the IP Readers wake & synchronize to the ASSA Database, the user must manual run the GCS ASSA Sync Program and then manually trigger the IP Readers to synchronize to the Assa Database.

- A. Withdraw access from the System Galaxy Cardholder programming screen. This is done by deactivating the cardholder, or deactivating the card, or removing access to the desired door – see chapter 9.

① System Galaxy allows access privileges to be granted at individual readers/doors by using the 'Personal Door' feature.

- B. Manually run the **GCS ASSA Sync** Program after saving cardholder changes, but before triggering the IP Reader(s) to wake and synchronize.
- C. Physically walk to affected IP Reader(s) and trigger the Reader(s) to wake and synchronize by presenting the Command Card or PIN Command, etc.

<< Recommendations continue on next page >>

2.1.4 SYSTEM GALAXY CONFIGURATION RECOMMENDATIONS

1. **SOFTWARE INSTALLATION: SG must be properly installed and connected/communicating.** Install the System Galaxy (SG) database, services and client software according to the installation instructions provided with the software DVD.
 - ① The **System Galaxy Software Install DVD** displays an intro splash screen at start up.
 - ① ***Embedded Install Help Instructions*** open in the PC's default browser when installer clicks the *Install Help* link found on the splash screen.
 - ① ***Galaxy manuals*** are found on the *Manuals* page of the *Install Help* screen(PDF format).
 - ① ***Adobe Acrobat Reader*** (free) which is provided with the installation DVD.
2. **“READER TYPE” CONFIGURATION:** Installer must be sure the **“ASSA ABLOY IP Reader”** type is added to System Galaxy as a selectable option in the SG ***Reader Types Programming screen***.
 - ① The ***GCS-ASSA Sync Program*** will not pick up the reader name/serial number from the Galaxy database if the type is mistyped/misspelled (it must be **“ASSA ABLOY IP Reader” without the quotation marks**). Depending on which version of System Galaxy you are installing, this may need to be manually added by the installer.
3. **LOOP/CLUSTER CONFIGURATION:** Installer must create at least one ‘dummy’ Loop/Cluster in System Galaxy to support the ASSA IP Readers, since ASSA IP Readers are not connected directly to the Galaxy hardware (i.e. DPI/DSI boards). **THESE WILL NOT APPEAR IN THE HARDWARE TREE.**
 - ① The ‘dummy’ Cluster (loop) must be set to “no connection” in the *Loop/Cluster Programming screen* in System Galaxy (from the SG menu *Configure>Hardware* and choose the *600/635 Loop/Cluster Programming screen*).
 - ① NOTE: All events from the ASSA IP Readers will be assigned to the ‘dummy’ Loop/Cluster and designate the controller and reader names given.
4. **CONTROLLER CONFIGURATION:** Installer must create at least one ‘dummy’ Controller with enough DPI(s) to support the ASSA IP Readers:
 - ① One DPI board adds 2 reader slots to the system.
 - ① The Installer will be prompted to choose a ***default reader technology*** (proximity, ABA, etc.) when saving the controller and boards. Installer can change this in the *Programming screen*.

[**<< Recommendations continue on next page >>**](#)

5. **READER PROPERTIES CONFIGURATION:** installer must set the following fields in the System Galaxy Reader/Door Programming screen for each IP Reader:
 - a. Reader type field to “**ASSA ABLOY IP Reader**”. This enables the ASSA IP Reader [serial number] field.
 - b. Installer must correctly type each reader’s **serial number** into the correct reader slot in the system. The events and card/access privileges are linked by the reader serial number. The Serial Number field dynamically displays when

2.1.5 ENROLLING AND AUTHORIZING CREDENTIALS VIA SYSTEM GALAXY

6. **AUTHORIZATION CAVEAT:** When providing scheduled authorization (time schedules an access groups), the SG Panels and readers will honor the schedules. HOWEVER: these credentials will have unlimited 24/7 access to the ASSA IP Readers/doors when the reader synchronizes. Galaxy schedules are not transferred to the ASSA Database.
7. **When enrolling a keypad-code for a card code to be used at an ASSA Keypad Reader, the operator must follow the IP Reader constraints.**
 - a. **Keypad-codes must be 6-digits long for a Px type locks.** At the IP Reader, the user will enter a pound symbol followed by their 6-digit keypad code (e.g. #123456).
 - b. **Keypad-codes can be from 1- to 7-digits long for an Sx type locks.** At the IP Reader, the user will enter the keypad-code followed by a star symbol (e.g. 1*, or 1234567*).

2.1.6 GCS ASSA SYNC PROGRAM REQUIREMENTS

1. The **GCS ASSA Sync Program** should be scheduled to run automatically with Windows Task Scheduler.
2. Galaxy recommends the automated runtime be at least 1 hour before the ASSA IP Readers are scheduled to wake up and synchronize to the Assa database.

End of this section.

3 INSTALLING THE ASSA DSR APPLICATION & DATABASE


This section covers how to install the ASSA DSR Application and ASSA Database using MS® SQL EXPRESS to ensure compatibility with the *GCS ASSA Sync Program*.

- ▶ Assumption is made that the SG Database, Comm Server and Client Software is installed.
- ▶ Internet/intranet connectivity is required to install the components to this interface.
- ▶ **Port 8080 must be open** on the network internally. This is an ASSA DSR/API requirement.
- ▶ DO NOT INSTALL THE ASSA COMPONENTS ON A GALAXY SERVER.
- ▶ Run the correct version of the DSR Installer executable (32bit vs. 64bit) depending upon the operating system of the ASSA SERVER/PC.
- ▶ To interface with **GCS ASSA Sync**, select the **MS® SQL EXPRESS** when prompted.

Steps to install ASSA DSR/Database:

DSR 5.0.2 Installation Screenshots

1. Insert the 'Galaxy GCSASSASync Install CD.
2. Double-click the **dsr.installer_5.0.2_xx.exe** (where _xx represents 32 or 64 bit versions).
 - ① Install the version that is compatible with your server operating system – i.e. 32bit or 64bit.
3. Launch the DSR Setup Wizard
4. Click [NEXT] to continue.

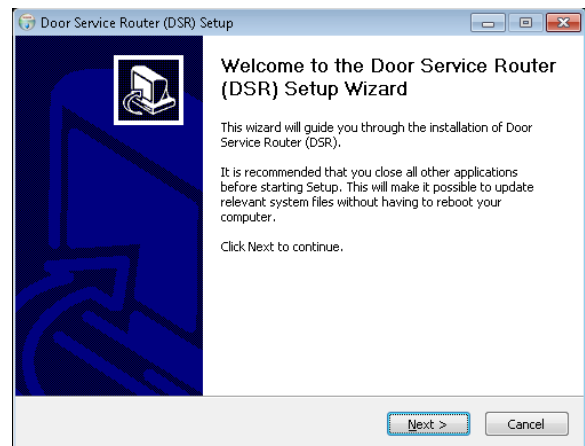


5. Print and accept the End User License Agreement to proceed.
6. Click [NEXT] to continue.




7. Installer must select the database version.


- ① **IMPORTANT:** Galaxy recommends you install the MS SQL EXPRESS when interfacing with the GCS ASSA Sync.

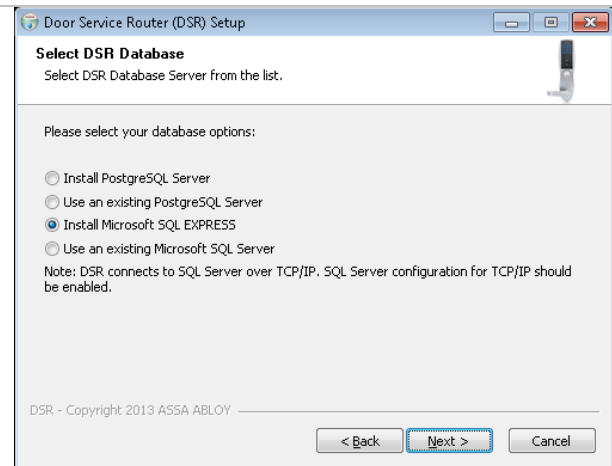


8. Click [NEXT] to continue.

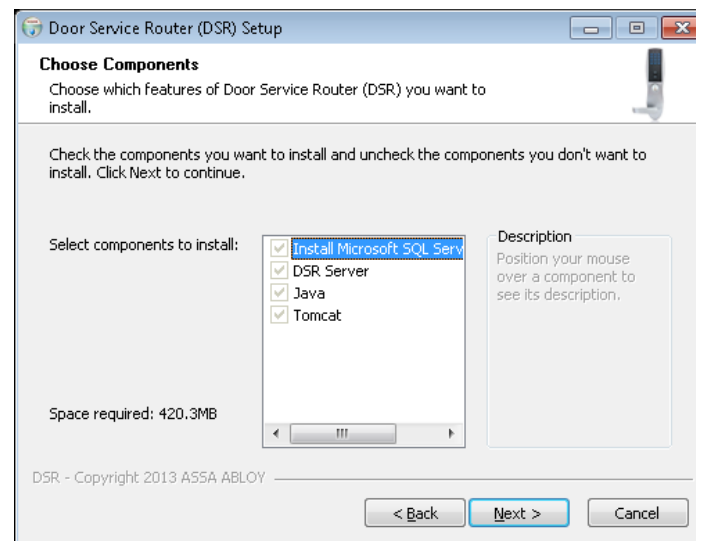


9. Click [NEXT] to continue.

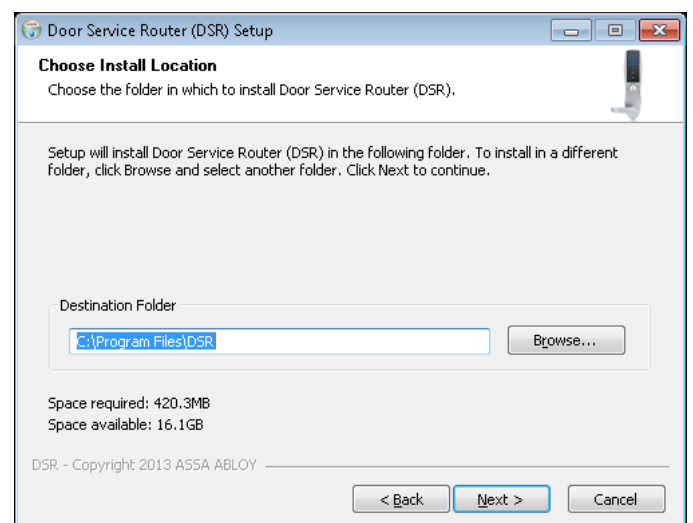


10. Click [NEXT] to continue.

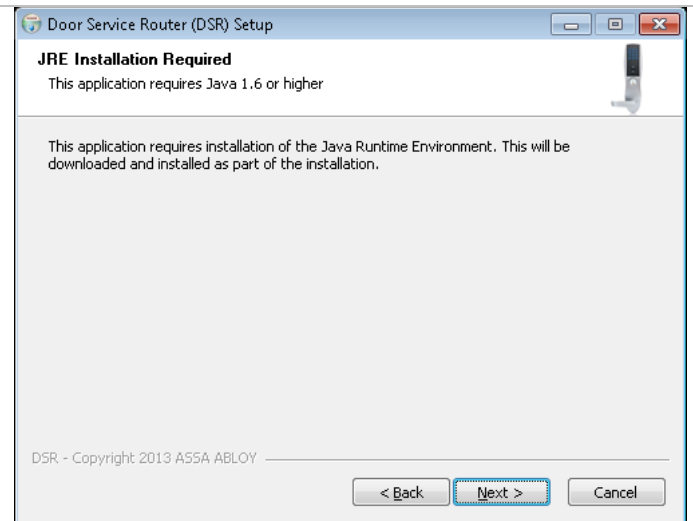


11. Enter a secure password in the [Password] field for the sa login to the DSR database.
12. Re-enter the same password in the [Confirm Password] field.
13. Click [NEXT] to continue.

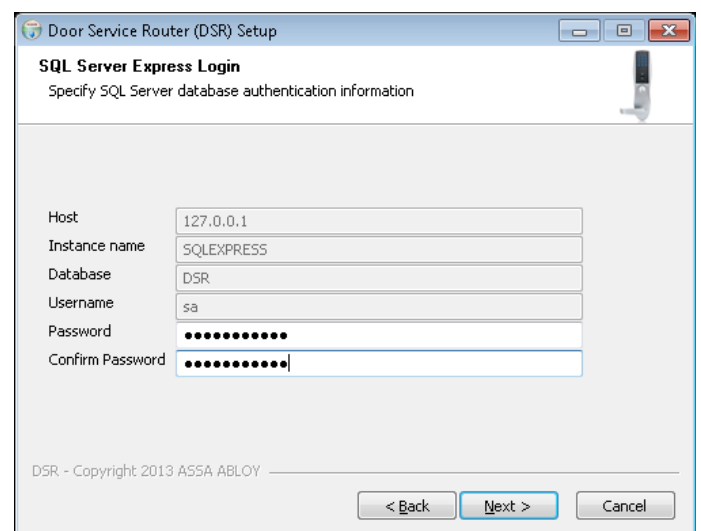


14. Enter or select a start menu folder.
15. Click [NEXT] to continue.

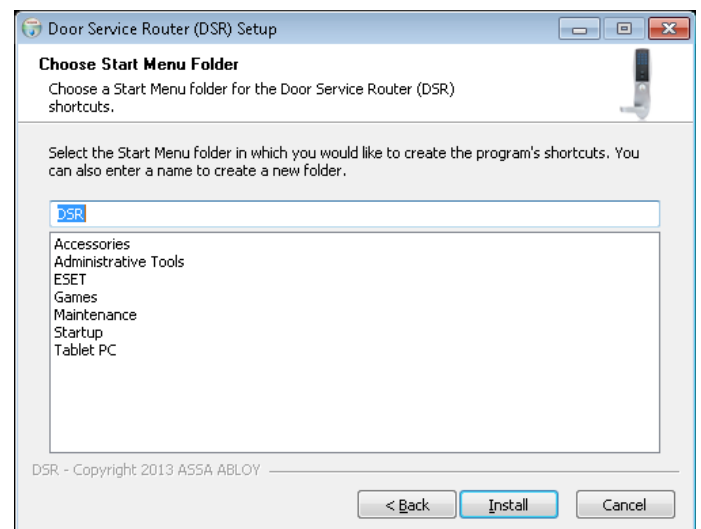

16. Click [NEXT] to continue.

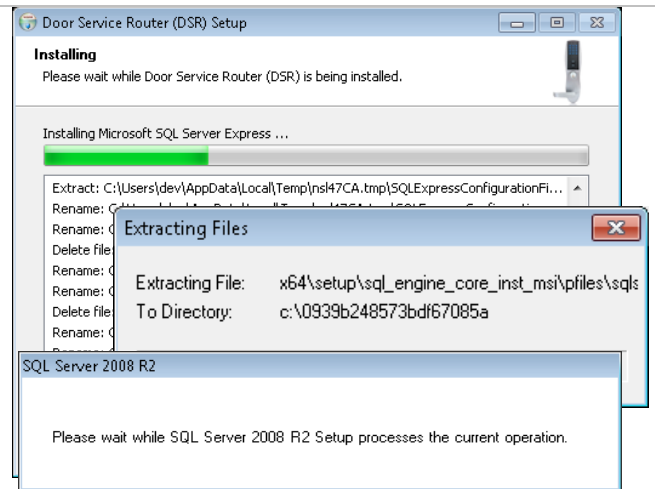


17. Click [NEXT] to continue.

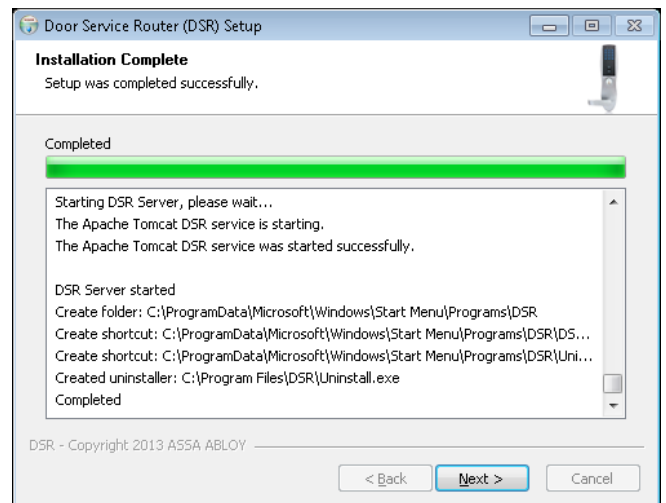


18. Click [FINISH] to continue after choosing the options you desire.

19. The ASSA INSTALLER will create shortcuts for your desktop.

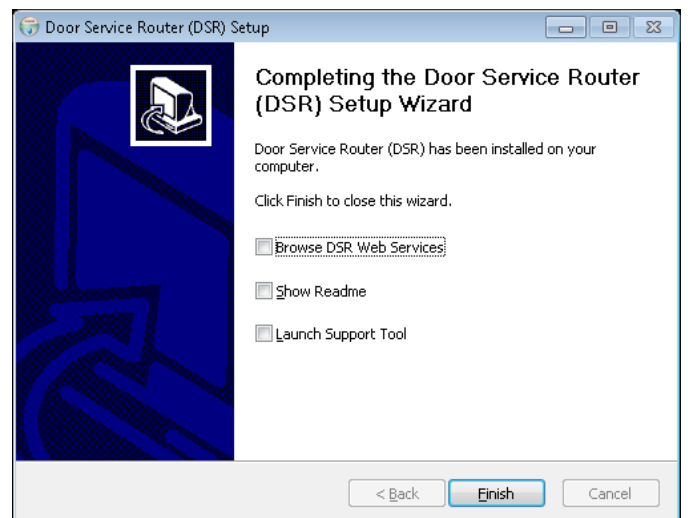


20. The '**Apache Tomcat DSR**' service is installed to run/start automatically.

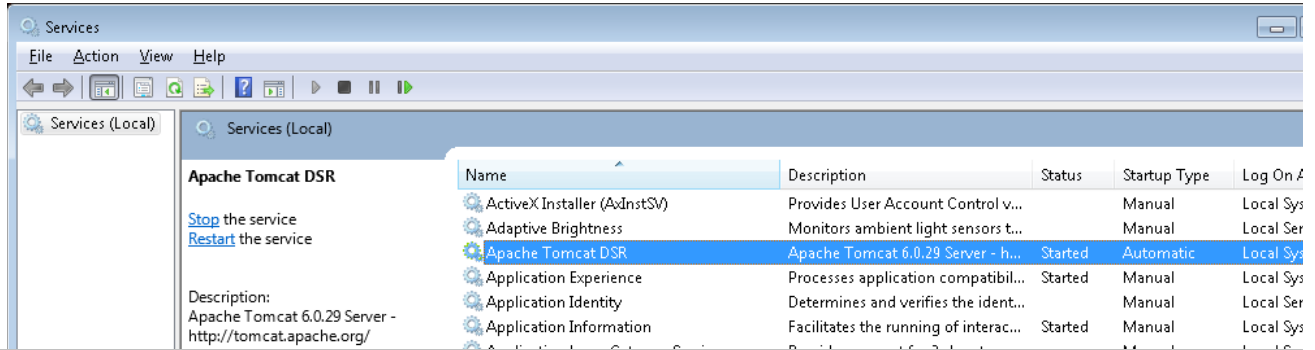

21. Verify the **DSR Support Tool Icon** is present on the Desktop and that the DSR Support Tool launches successfully.

22. Supply the User Name and Password *that ASSA ABLOY Documentation provides*.

23. Click the [Sign In] button.

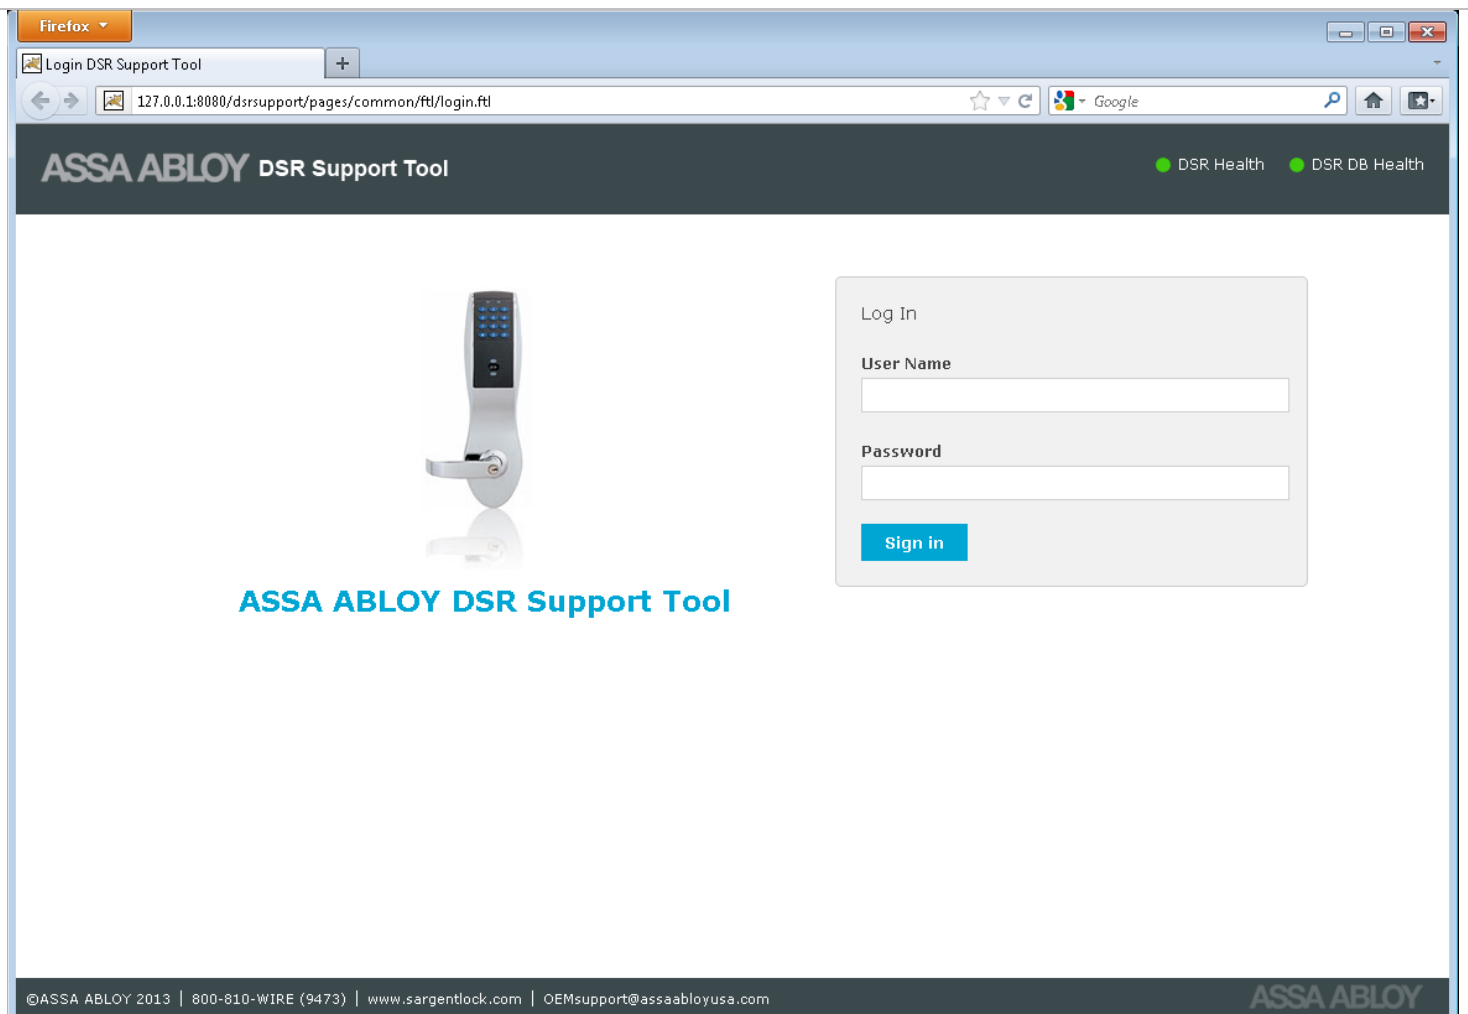

24. if you have pre-configured and connected any readers, the **DSR Tool** will display them.

- ① Ensure the **DSR HEALTH indicator** is green.
- ① Ensure the **DSR DATABASE indicator** is green.
- ① Indicators may take a few minutes to turn green.
- ① Readers **may/or may not be** “confirmed” (green checkmark), but the GCSASSASync program will confirm every reader that is really configured in the System Galaxy database when it runs.

The screenshot shows the ASSA ABLOY DSR Support Tool interface in a Firefox browser. The URL is 127.0.0.1:8080/dsr/support/app/viewOnlineAPTab. The interface has a top navigation bar with 'Facility View', 'Configuration Settings', and 'Decryption Utility'. Below this is a search bar and a 'Lock List' section. The 'Lock List' section displays a table with 4 items, all of which are 'Confirmed' and 'Synchronized'. The table columns are: Serial Number, Description, Type, Online, Confirmed, Sync Status, and IP Address. Below the table, there is a pagination bar showing 'page 1 of 1' and 'Displaying 1 to 4 of 4 items'. At the bottom of the interface, there is a footer with copyright information and contact details.

Serial Number	Description	Type	Online	Confirmed	Sync Status	IP Address
IT306E0529PA0DCA	Old PoE Lock	SxPx External Powered	<input type="radio"/>	✓	🔄	192.168.24.238
IT311D53775C05AA	Wifi Lock	SxPx Battery Powered	<input type="radio"/>	✓	🔄	192.168.24.58
IT321D1195SA05CA	PoE Lock	SxPx External Powered	<input type="radio"/>	✓	🔄	192.168.24.241
IT337E0316PC0DAA	Old Wifi Lock	SxPx Battery Powered	<input type="radio"/>	✓	🔄	192.168.24.240

End of this section.

4 INSTALL THE ASSA CONFIG TOOLS

This section covers how to install the ASSA CONFIG TOOLS to configure the ASSA IP LOCKS.


- ▶ See the **Requirements and Recommendations** for important notes.
- ▶ Use the **Network Configuration** and **Lock Configuration** tools provided by ASSA ABLOY (these will launch from a desktop shortcut). They are installed by the Assa Certified Dealer which is not covered in this manual.

4.1 INSTALLING THE ASSA CONFIGURATION TOOLS

Steps to Install the Configuration Tools:

Screenshots


1. Double-click the ComboInstaller EXE file from the install CD.

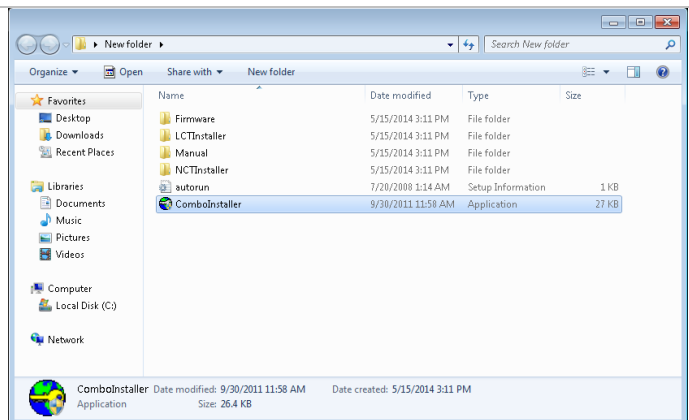

2. Check BOTH boxes




3. Click the NEXT button.

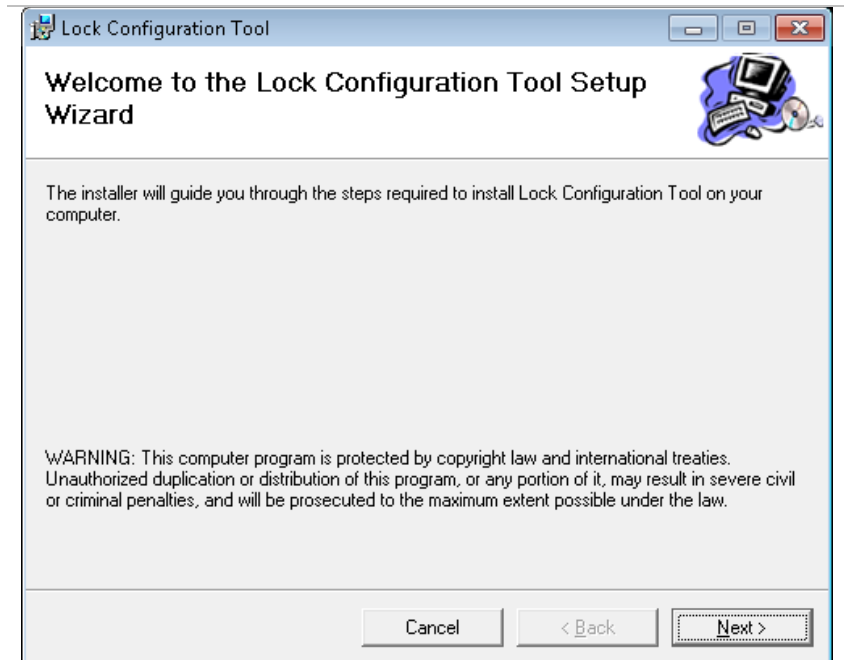


4. Recommended to accept the default install location.


5. Click the NEXT button.

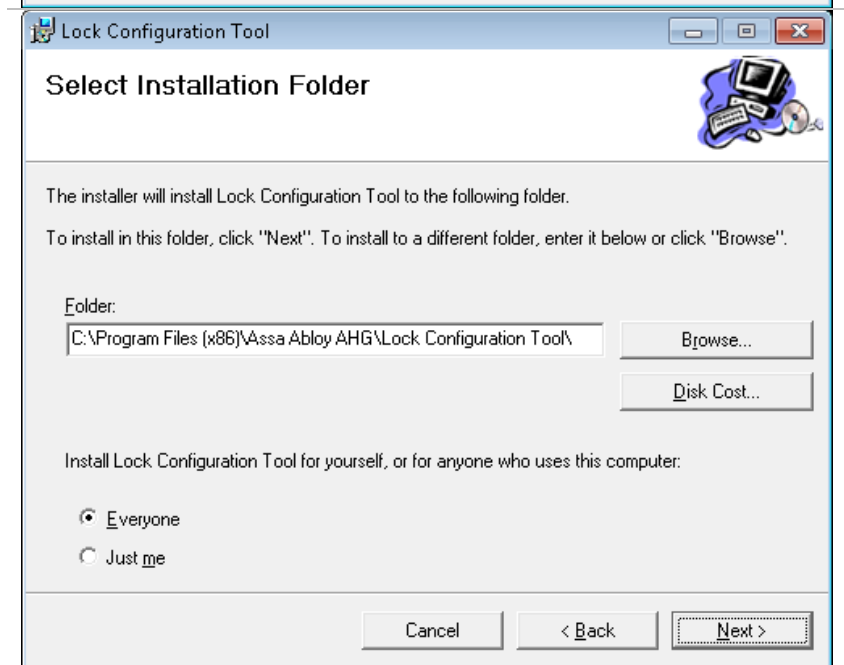

6. Click the NEXT button.

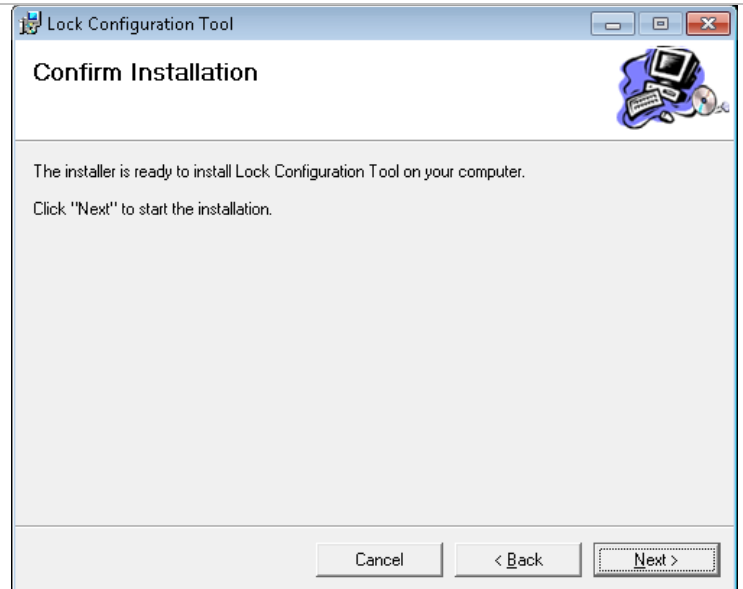

7. Click the CLOSE button.

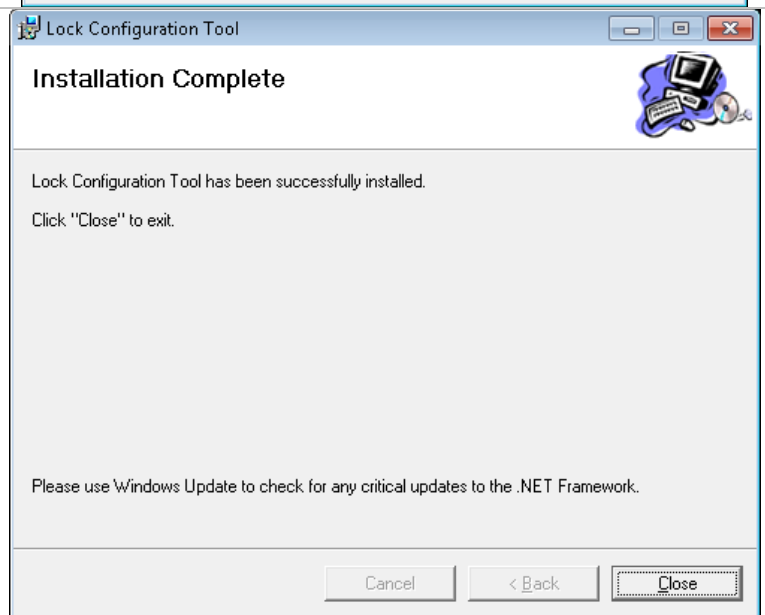

4.2 CONFIGURING THE NETWORK SETTINGS OF EACH LOCK

Steps to Network Configuration Tool:

Screenshots

1. Double-click the Network Configuration desktop icon to launch the tool.



2. Enter a **site name** and
3. Supply the indicated passwords.
4. Click [NEW] to add a new door/lock.

Network Configuration Tool - C:\Users\jkaminski\Desktop\test.slct*

File Help

General Information

Site Name: Testing Install Password: 1234

Inactivity Timeout: 300 (seconds, 0 = off) IT Password: 1234

Locks

Door 1
Door 2
Door 3
Door 4

Lock Info

Name: Door 1

S/N: IT306E0529PA0DCA

Reader: Non iClass

Configure

5. Enter a name for the Door/Lock in the [Name] field under the Lock Info section.
6. Enter the lock serial number found under the lock cover
7. Select the Reader type.
8. Add the IP Address for the lock
 - ① SSID is for WiFi locks only.
 - ① EAC IP & Port is the address of the server where DSR Tool is installed.
9. Set encryption type – refer to the site IT Professional.
10. Set whether the lock will unlock or remain locked in case of a power failure.
11. Save settings.

Network Configuration Tool - C:\Users\jkaminski\Desktop\test.slct*

File Help

General Information

Site Name: Testing Install Password: 1234

Inactivity Timeout: 300 (seconds, 0 = off) IT Password: 1234

Locks

Door 1
Door 2
Door 3
Door 4

Lock Info

Name: Door 1

S/N: IT306E0529PA0DCA

Reader: Non iClass

Configure

DHCP

IP Address: 192.168.24.238 Subnet Mask: 255.255.240.0

Gateway: 192.168.16.1 EAC IP Addr: 192.168.24.30

SSID: EAC Port: 2571

Encryption / Authentication... None

Lock AES Key: Generate

DPAC User Name: DPAC Password:

DPAC default wireless rate: Use alternate PoE communication mode

MTU Size (DPAC: 5 to 1460; PoE: 512 to 1400) 536

When power fails the lock will: Lock upon power failure Unlock upon power failure

Copy View Mode New Edit Delete

Version 2.3 Release 5/02/2012


- ① See the ASSA ABLOY documentation for any instructions related to encryption and other special configuration features.

4.3 ADDING A LOCK TO THE ASSA DATABASE


1. Double-click the Lock Configuration desktop icon to launch the tool.




2. Click **File menu and select OPEN > Configuration File**
3. Choose the filename you created in the previous section using the Network Configuration Tool.
4. Select Door/Lock from the **[Lock] droplist** that is connected to the computer.
 - ① Installer must have the lock connected to the computer with the *Assa Dealer supplied cables*.
 - ① Click FILE Menu and select Setup to change which COM port that the reader/lock is physically connected to.
5. Click **[Connect to Lock] button** to connect to the lock.

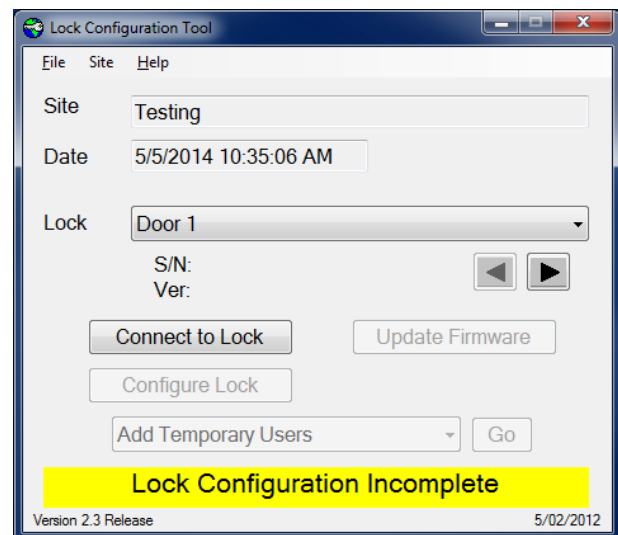


6. The serial number will display in green when the selected lock matches the connected lock.
7. Click [Configure Lock] button to push the network settings into the connected lock.
8. Follow / respond to any additional user prompts that display as the lock is being configured (messages vary based on individual configurations).

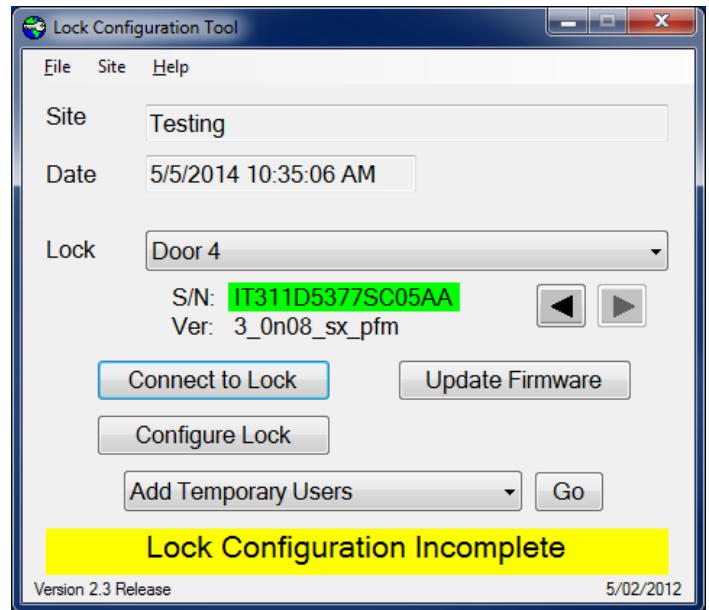

9. User confirmation prompt displays when the lock configuration is complete

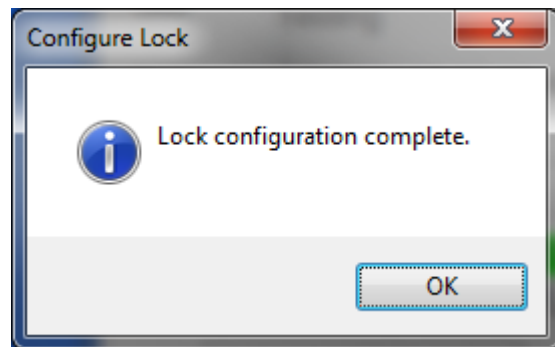

- ① NOTE: This screen shows the additional actions you can select.

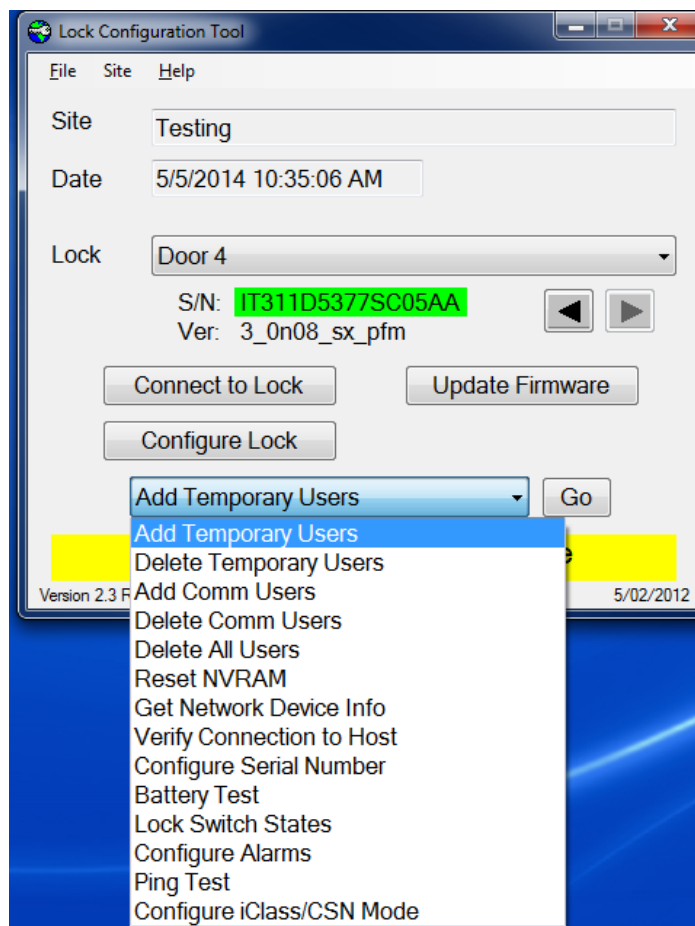

End of this section.

4.4 VIEWING THE LOCK WITH THE DSR SUPPORT TOOL

In this step the installer will verify the lock is able to connect to the DSR Database.

Steps to using the DSR Support Tool:


Screenshots

1. Launch the ASSA ABLOY DSR Support Tool.
 - ① The DSR Support Tool should open in your default browser.




2. Provide the default username and password.
3. Click [SIGN IN] to continue.

- ① Don't be alarmed about unconfirmed locks at this time – GCS ASSA Sync will confirm the locks when it connects.

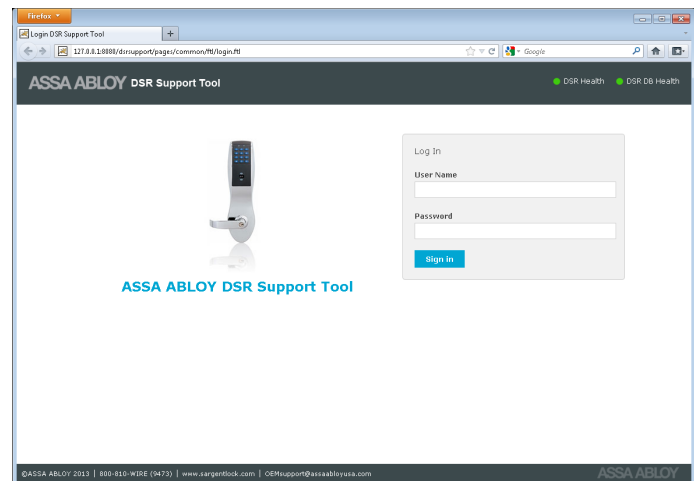

4. The home screen will display.

- ① On the right panel, the DSR Tool will display the locks that are connected successfully.
- ① **TIP: You can use this tool to find your lock serial number, which will be needed to program the reader information into System Galaxy.**

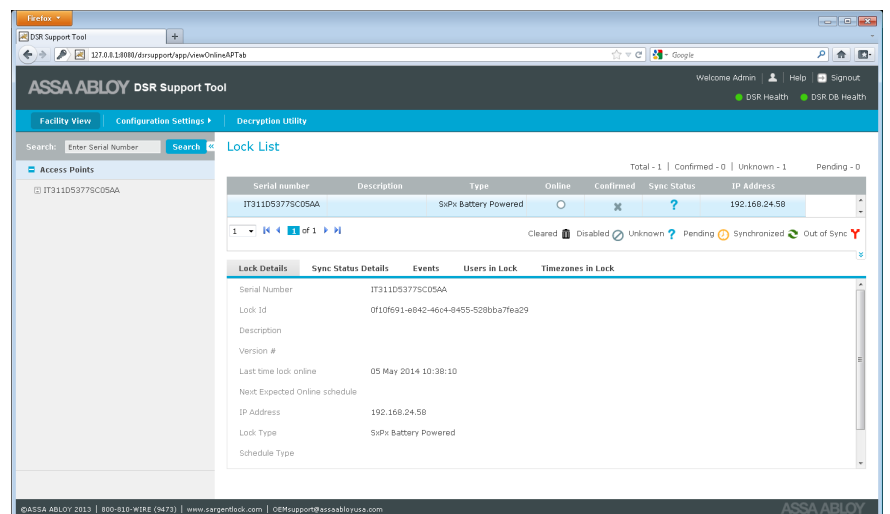

End of this section.

5 INSTALLING THE 'GCS ASSA SYNC' PROGRAM

This section covers how to install the *GCS ASSA Sync Program*.

- ▶ Network connectivity is required to install the components to this interface.
- ▶ The *GCS ASSA Sync Program* can be installed on the Galaxy Database Server (recommended).
- ▶ The ASSA DSR Server must be **installed and running** (online/available for connections).
- ▶ After installation, the program can be executed/run manually from its local drive for test purposes.
- ▶ It is recommended you schedule the *GCS ASSA Sync Program* to run automatically at least one hour before the ASSA Locks are scheduled to wake up and synchronize to the ASSA Database.
- ▶ See the next section for details on how *GCS ASSA Sync* works.


Steps to install *GCS ASSA Sync Program*.

Installation Screenshots


1. Insert the Galaxy GCS ASSA Sync CD.
2. Click [NEXT] to begin installing the GCS ASSA Sync program.




3. Enter user name and organization and select who has access to the application.
4. Click [NEXT] to continue.

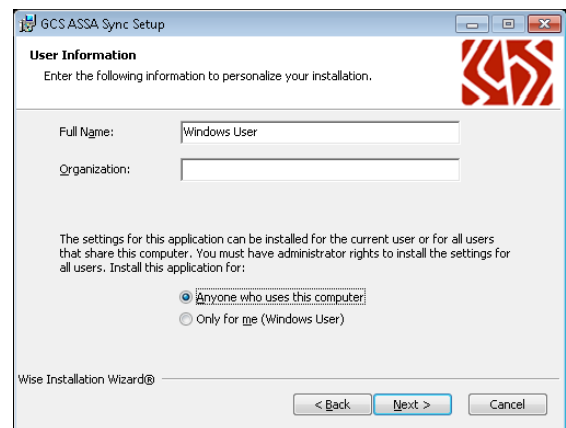


5. The installation wizard will install the **GCS ASSA Sync** executable in the recommended path C:\GCSASSASync\.
6. Click [NEXT] to continue.

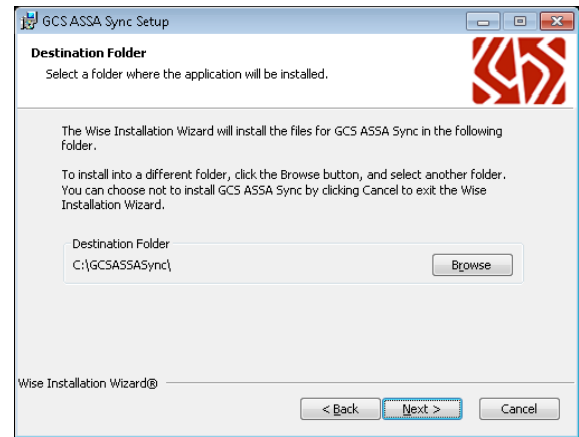

7. Provide the IP Address and IP Port of the ASSA DSR server.
 - ① This information is required for the GCS ASSA SYNC program to connect to the ASSA DSR when updating the ASSA Database
8. Click [NEXT] to continue.

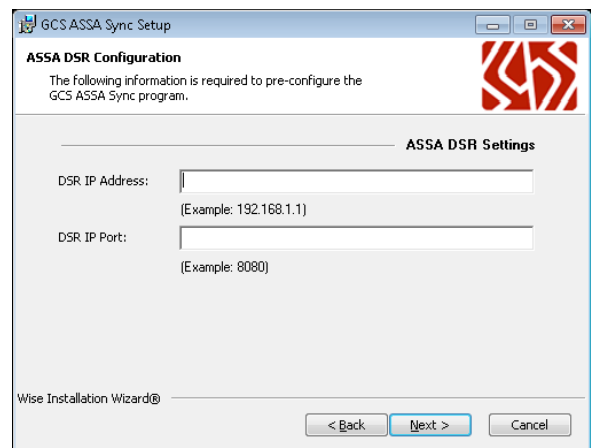


9. Provide the **ODBC Source Name**, **ODBC Username** and **ODBC Password** that the Galaxy database was configured to use during the SG Database Server install.
10. Click [NEXT] to continue.

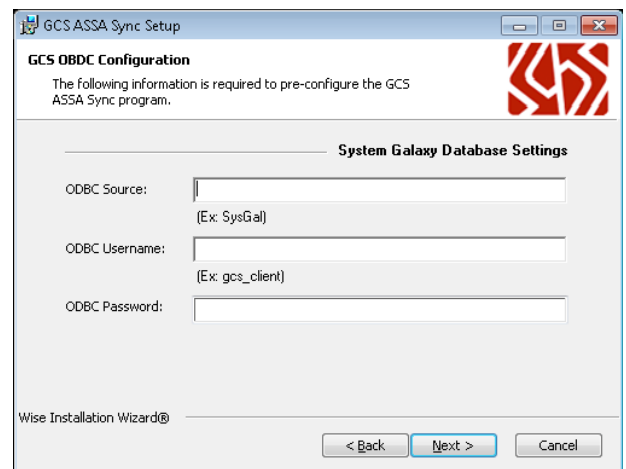


11. Click [NEXT] when you are ready to begin the application installation.

- ① You can click Cancel to exit the program
- ① You can click Back to return to previous screens to verify or reenter data.

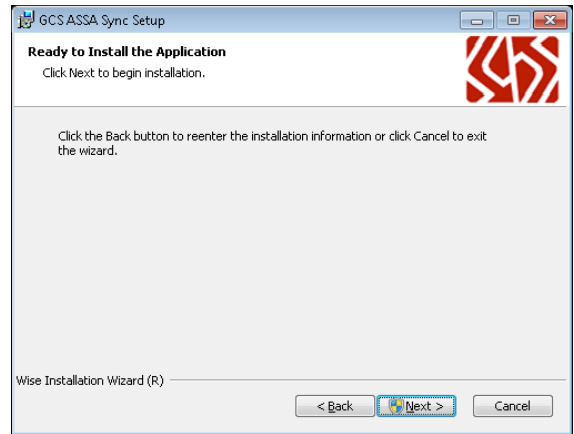


12. Allow the *GCS ASSA Sync Setup Wizard* to extract the files and complete the installation normally.

- ① You may need to [Accept] a Windows **User Access Control prompt** to allow the wizard to start the install.
- ① Clicking Cancel will abort the installation.

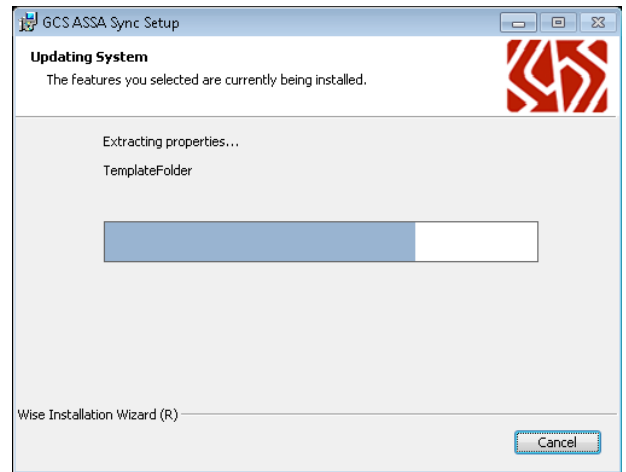

13. When the *GCS ASSA Sync Setup Wizard* has completed the installation, it will display a message stating that the “GCS ASSA Sync has been successfully installed”.

- ① The install wizard does not install any menu options, shortcuts or desktop icons to launch the GCS ASSA Sync since the application is intended to run silently using the Windows task scheduler.

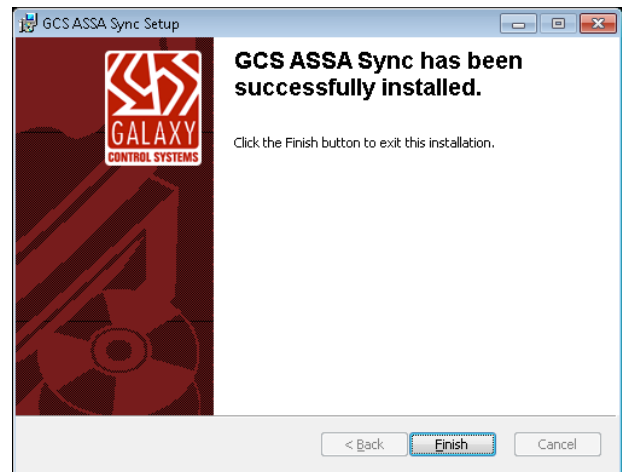

End of this section.

6 GCS ASSA SYNC FUNCTIONALITY

This section covers the functionality and output of the *GCS ASSA Sync Program*.

6.1 GCS ASSA SYNC PROGRAM FUNCTIONALITY

The *GCS ASSA Sync Program* reads the Galaxy Database to determine which users in the Galaxy Database are authorized to have access to any **ASSA IP Reader**. *GCS ASSA Sync* then pushes the credentials and reader serial numbers into the Assa Database along with the reader serial numbers that the user/credential has access to.

GCS ASSA Sync also deletes all credentials from the ASSA Database that no longer have any valid access in Galaxy to an ASSA Reader.

GCS ASSA Sync also reads the ASSA Database to retrieve the authorization logs (events) that have occurred since the last synchronization.

IMPORTANT: Users/cardholders who have any access (unlimited or limited/scheduled) access at any ASSA IP Reader will be granted 24/7 unlimited access at the **ASSA IP Reader**.

IMPORTANT: Users/cardholders who's access is withdrawn from a reader in the Galaxy system will be automatically removed the next time the *GCS ASSA Sync Program* runs. access at any ASSA IP Reader will be granted 24/7 unlimited access at the **ASSA IP Reader**.

6.2 LONG DESCRIPTION OF THE GCS ASSA SYNC PROGRAM PERFORMANCE

Upon execution, the ***GCS ASSA Sync Program*** performs the following actions in the order shown:

1. Reads the configuration file
2. Establishes connection with Galaxy database.
3. Establishes connection with ASSA database.
4. Downloads necessary Galaxy data:
 - Users (cards) in Galaxy that have access to any Reader designated as an ASSA ABLOY IP READER
 - Readers by Serial Number, that is designated as an ASSA ABLOY IP READER.
5. Downloads necessary ASSA data:
 - Readers (Access Points)
 - Authorizations
 - Users
 - Logs (events that have occurred at the ASSA Readers)
6. Removes orphaned Users from ASSA database.
 - Confirms ASSA Reader (Access Point) if present in Galaxy database and unconfirmed in ASSA database.
7. Synchronizes Users between the two databases:
 - Users (cards) in Galaxy database that are not in ASSA are pushed to ASSA database.
 - Users (cards) in the ASSA database that are not in Galaxy are removed from ASSA database.
 - Removes ASSA Reader (Access Point) if present in ASSA database but not in Galaxy database.
8. Imports necessary logs into Galaxy database (card/reader activity events).
9. Closes all connections.

6.3 EXAMPLE OF LOG OUTPUT

```
[ SYNC STARTED ] 2014-03-19 09:13:23.481000
03/19/2014 09:13:23 AM INFO: Reading config..
03/19/2014 09:13:23 AM INFO: Connecting to ODBC..
03/19/2014 09:13:23 AM INFO: Setting up SOAP protocol..
03/19/2014 09:13:23 AM INFO: Setting up SOAP Client..
03/19/2014 09:13:27 AM INFO: [ IMPORTING/CLEANING ASSA DATA ]
03/19/2014 09:13:27 AM INFO: Importing Access Points...
03/19/2014 09:13:28 AM INFO: [ COMPLETE ]
03/19/2014 09:13:28 AM INFO: Importing Authorizations...
03/19/2014 09:13:28 AM INFO:      Importing 8 Authorizations..
03/19/2014 09:13:28 AM INFO: [ COMPLETE ]
03/19/2014 09:13:28 AM INFO: Importing Users..
03/19/2014 09:13:28 AM INFO:      Importing 2 Users..
03/19/2014 09:13:28 AM INFO: [ COMPLETE ]
03/19/2014 09:13:29 AM INFO:      Retrieving 100 logs from IT321D1195SA05CA
03/19/2014 09:13:29 AM INFO:      Retrieving 50 logs from IT321D1195SA05CA
03/19/2014 09:13:30 AM INFO:      Retrieving 100 logs from IT306E0529PA0DCA
03/19/2014 09:13:30 AM INFO:      Retrieving 50 logs from IT306E0529PA0DCA
03/19/2014 09:13:30 AM INFO:      Retrieving 100 logs from IT337E0316PC0DAA
03/19/2014 09:13:30 AM INFO:      Retrieving 100 logs from IT337E0316PC0DAA
03/19/2014 09:13:31 AM INFO:      Retrieving 38 logs from IT337E0316PC0DAA
03/19/2014 09:13:31 AM INFO:      Retrieving 100 logs from IT311D5377SC05AA
03/19/2014 09:13:31 AM INFO:      Retrieving 100 logs from IT311D5377SC05AA
03/19/2014 09:13:31 AM INFO:      Retrieving 52 logs from IT311D5377SC05AA
03/19/2014 09:13:31 AM INFO: [ ADDING/REMOVING USERS ]
03/19/2014 09:13:31 AM INFO: [ COMPLETE ]
03/19/2014 09:13:31 AM INFO: [ PUSHING LOGS TO GALAXY ]
03/19/2014 09:13:32 AM INFO: Imported: EVENT_USER (65): (20, 112, 3) -> IT321D1195SA05CA @ 2014-03-18
14:48:20.000387
03/19/2014 09:13:32 AM INFO: Imported: EVENT_USER (65): (20, 112, 3) -> IT306E0529PA0DCA @ 2014-03-18
14:48:22.000230
03/19/2014 09:13:32 AM INFO: Imported: ALARMID_DENIEDACCESS (64): None -> IT337E0316PC0DAA @ 2014-03-18
14:47:45.000713
03/19/2014 09:13:32 AM INFO: Imported: ALARMID_DENIEDACCESS (64): None -> IT311D5377SC05AA @ 2014-03-18
14:47:12.000500
03/19/2014 09:13:32 AM INFO: Imported: ALARMID_DENIEDACCESS (64): None -> IT311D5377SC05AA @ 2014-03-18
14:47:15.000500
03/19/2014 09:13:32 AM INFO: Imported: ALARMID_DENIEDACCESS (64): None -> IT311D5377SC05AA @ 2014-03-18
14:47:18.000500
03/19/2014 09:13:32 AM INFO: [ COMPLETE ]
03/19/2014 09:13:32 AM INFO: [ SYNC REPORT ]
03/19/2014 09:13:32 AM INFO: Total APs: 4
03/19/2014 09:13:32 AM INFO: Total Users: 2
03/19/2014 09:13:32 AM INFO: Total Auths: 8
03/19/2014 09:13:32 AM INFO: Sync Time: 8.63899993896 seconds
```

7 SCHEDULING THE GCS ASSA SYNC EXECUTION

This section covers how to RUN the **GCS ASSA Sync Program** using Windows Task Scheduler

- ▶ Network connectivity is required between the **ASSA Database server** and **GCS ASSA Sync Program**.
- ▶ After installation, the program can be run/executed manually from its local drive for test purposes.
- ▶ It is recommended you schedule the **GCS ASSA Sync Program** to run automatically at least one hour before the ASSA Locks are scheduled to wake up and synchronize to the ASSA Database.

7.1 RUNNING 'GCSSYNC.EXE' APPLICATION MANUALLY

NOTE: Running the '**GCSSync**' Application manually may be needed when/if a credential is lost or withdrawn, or when access to a door/area is completely removed.


NOTE: *Since the ASSA IP Readers must wake-up and synchronize to the ASSA Database to pick up changes, you may also wish to manually trigger the synchronization.*

Steps for manual synchronization.


1. **DEACTIVATE THE CARDHOLDER OR THE INDIVIDUAL CARD CREDENTIAL IN SYSTEM GALAXY** – see chapter 9 for a view of the Cardholder programming.
 - a. NOTE: When A credential **expires naturally or is manually removed** (or access is removed) in the System Galaxy database, the **GCS ASSA Sync Program** will pick up the change the next time it is scheduled to run, and push it to the **Assa Database**.
 - b. **The IP Readers will then pick up the change whenever they are scheduled to wake-up.**
 - ① IF YOU WANT TO EXPEDITE THE UPDATE TO THE IP READERS FOLLOW THE MANUAL UPDATE STEPS IN THIS SECTION
2. To expedite the update, **manually run the GCSSync.exe after the expiration, de-authorization or de-activation of the credentials in System Galaxy.**
 - ① System Galaxy hardware controllers are updated immediately
 - ① ASSA IP Readers that use the **GCSSync Program** can be manually updated by the steps in this procedure.
 - ① Be aware that ASSA Aperio products are fully integrated accord to the specifications of the previous ASSA integration – see the Galaxy ASSA ABLOY Addendum for information on the Aperio Product.

<< continued on the next page >>

3. Browse to the folder using Windows® Explorer
4. Double-click the **GCSsync** application. *If file extensions are hidden, you will not see the '.exe' part of the filename.*

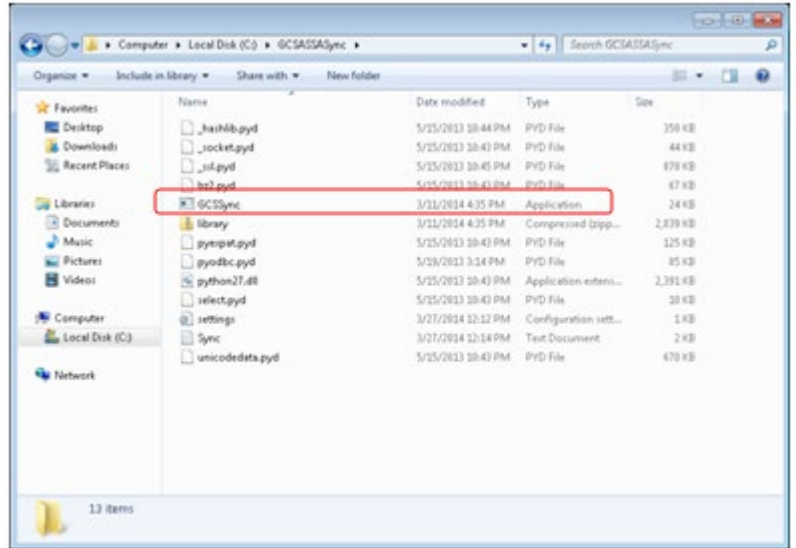

5. A Windows® console shell will open to execute the application.
 - ① The window will close automatically when the process is completed.
 - ① A log file will be created.

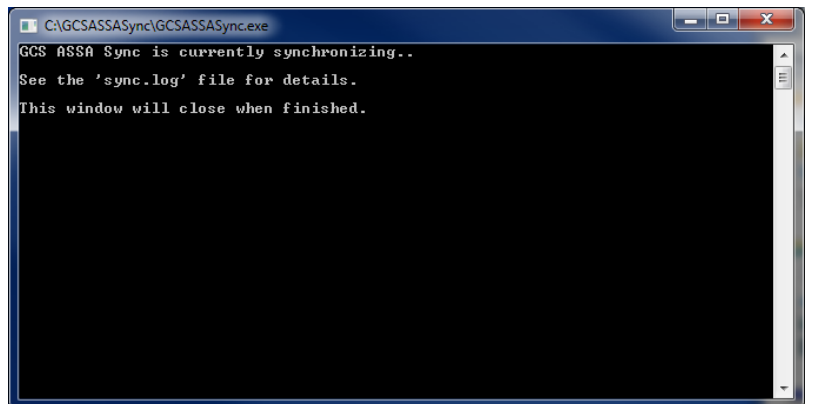

6. AT THIS POINT THE ASSA DATABASE IS SYNCHRONIZED WITH THE GALAXY DATABASE.
 - ① Cardholders who **are inactive** are removed from the ASSA Database (see the Cardholder Personal tab).
 - ① Card/credentials that are **inactive, not activated/authorized** or **are expired** are removed from the ASSA Database (see the Card/Badge Settings tab).
 - ① Any credential that is set to **“NO ACCESS”** on all [access group] fields **AND** has no door access to IP Readers through **Personal Doors feature**, **AND** has no access through **Access Profiles** are removed from the ASSA Database (see the Card/Badge Settings & Loop Details).
- ① **Important: any access in SG to an IP Reader will grant 24/7 access to the IP reader – regardless of scheduled times in SG.**
7. **Walk to the readers** and **use the PIN command** or **present the Wake-up Card** that triggers the reader synchronization (based on your model). See the reader manufacturer’s documentation for details.

7.2 CREATING A WINDOWS TASK SCHEDULE TO RUN 'GCSSYNC.EXE'


IT IS RECOMMENDED TO SET THE SCHEDULE TO RUN AT LEAST ONCE A DAY AND TO HAPPEN AT LEAST ONE HOUR BEFORE THE IP READERS ARE SCHEDULED TO WAKE AND SYNCHRONIZE TO THE ASSA DATABASE.

Steps to create a Windows Task Schedule.


Installation Screenshots

1. The **GCS ASSA Sync** directory defaults to C:\GCSASSASync\


- ① The application name is **GCSSync.exe**.
- ① If file extensions are hidden you will not see the '.exe'.

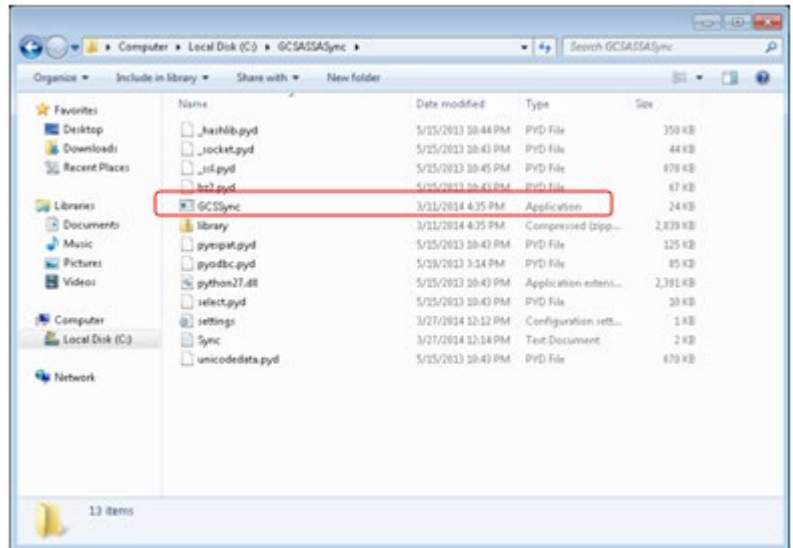


2. Open the Windows Task Wizard.
3. Select [Create a Basic Task] and enter a descriptive name such as "GCS ASSA Sync" to continue.
4. Click [NEXT] to continue.

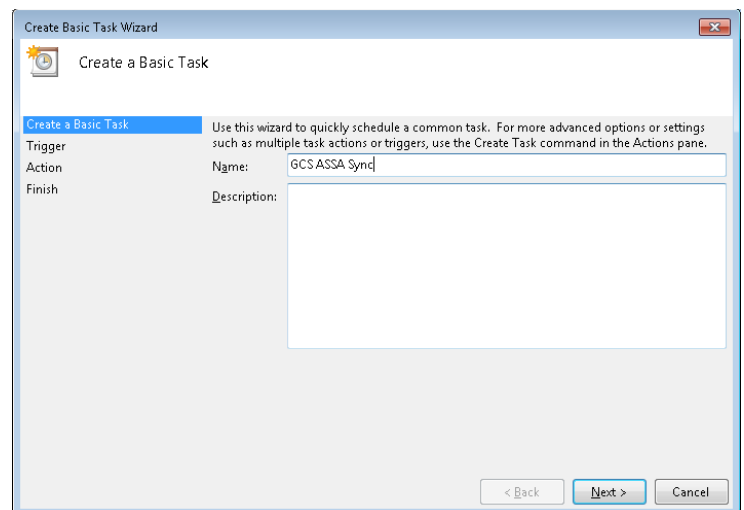


-
5. Select [Daily] trigger option.
 6. Click [NEXT] to continue.

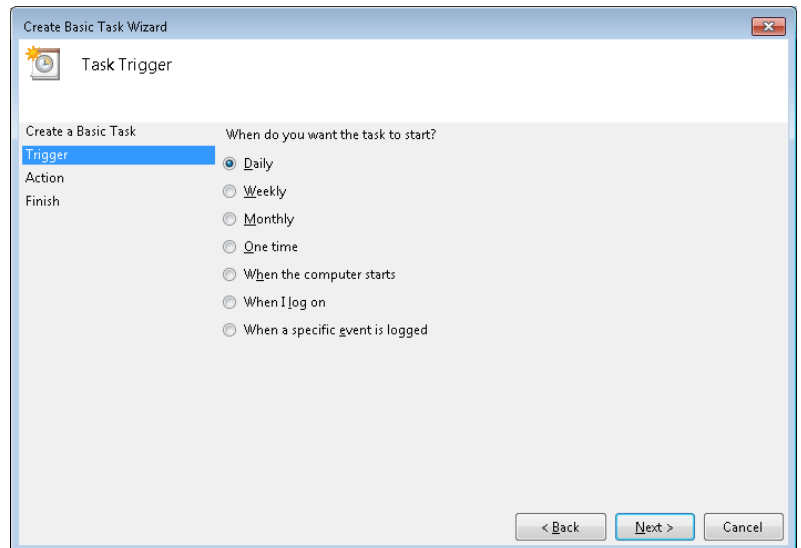

-
7. Set the [Start Time] (runtime) to at least 1 hour before the readers are scheduled to synchronize to the Assa Database. This way the data will be freshly synchronized between Galaxy and ASSA databases when the readers wake up and request data.
 8. Set the [Recur Cycle] to at least 1 time every day.
 9. Click [NEXT] to continue.

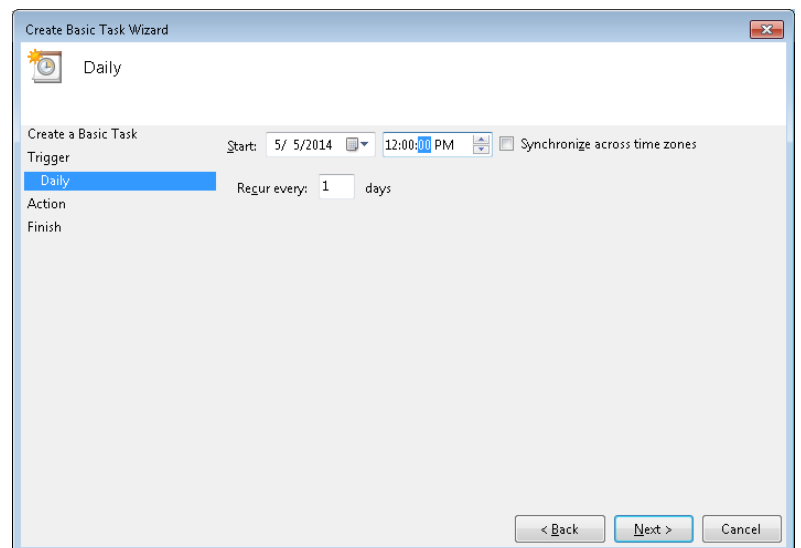


-
10. Select [Start a Program] option.
 11. Click [NEXT] to continue.

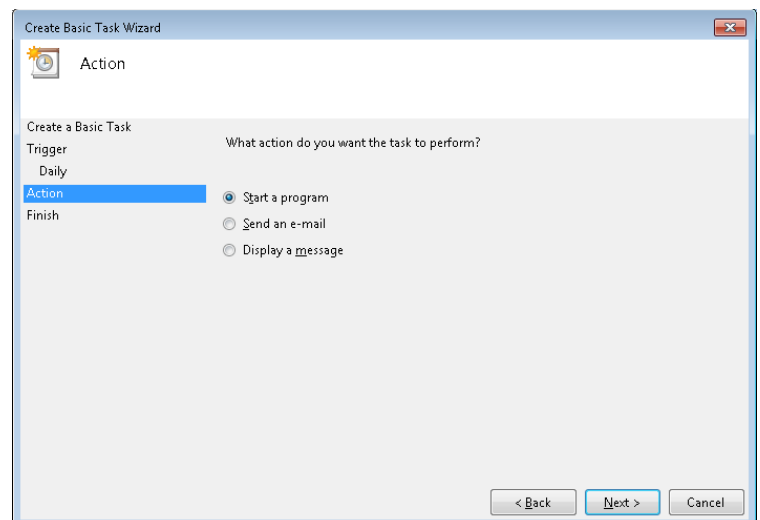


12. In the [Program] field, click [Browse] to navigate to GCS Assa Sync directory as shown and select the **GCSSync.exe** file.

13. IMPORTANT: You must manually type the directory pathname to the GCSSync.exe file into the [Start In] field. Do not include the filename in this field (i.e. **C:\GCSASSASync**)

14. Click [NEXT] to continue.

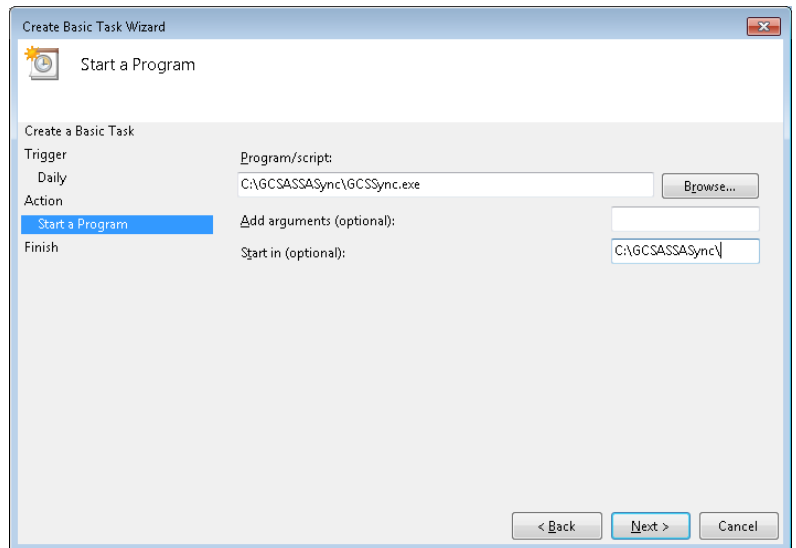

15. Click [FINISH] to save and complete the program.

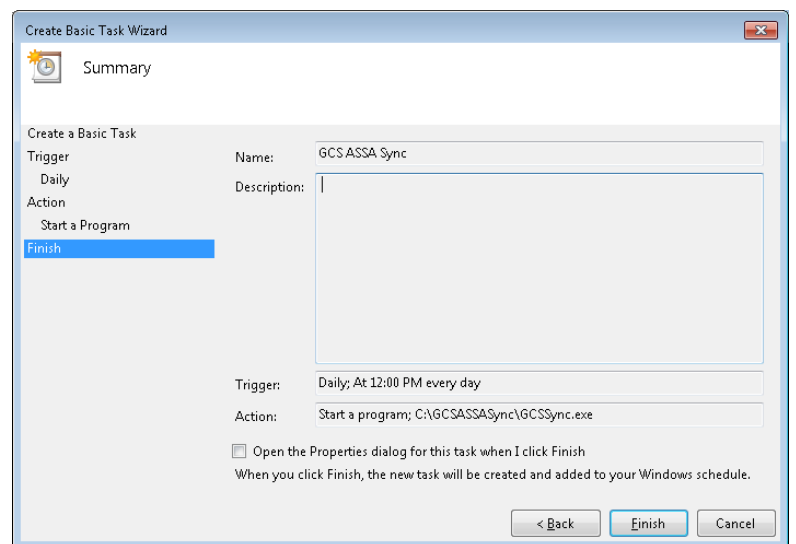

① **Galaxy recommends you test the GCS ASSA Sync Program to ensure it connects/syncs the ASSA Database.**

① The GCS ASSA Sync Program must be able to connect to the ASSA Database to perform the update.

① The ASSA Database will be updated when the GCS ASSA Sync Program actually runs.

① The ASSA ABLOY IP Readers must also wake-up and connect to the ASSA Database to update.

8 CONFIGURING THE SYSTEM GALAXY (SG) HARDWARE

This section covers adding hardware to the System Galaxy (SG) database. This is an abbreviated instruction guide. To see the expanded features and options available, installer must refer to the main Software User Guide.

This section covers the following topics:


- 8.1. Launching System Galaxy client software.
- 8.2. Adding a new Reader Type for ASSA ABLOY IP Reader to the Galaxy (SG) database.
- 8.3. Creating a 'dummy' Loop/Cluster (required to match IP Reader events with card activity in SG).
- 8.4. Creating a 'dummy' Controller and adding DPI boards (reader slots) to the System Galaxy database.
- 8.5. Adding each ASSA IP Reader's serial number to the Galaxy (SG) database.

8.1 LAUNCHING SYSTEM GALAXY CLIENT SOFTWARE

1. Double-click on the **SG Desktop Icon** to open the System Galaxy client software.
① SG Desktop Icon is on the **Main Comm. Server** and any **client workstation**.




2. Supply the **login name** and **password** for a Master level operator (required level of permissions to program hardware)

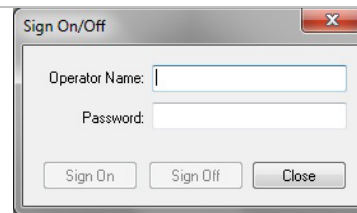

3. The System Galaxy software opens.

Example screen shot provided: Upon opening, any Loops & Readers programmed so far will display. ASSA IP Readers are not connected to real Galaxy Hardware; thus they do not appear in the Hardware Tree.

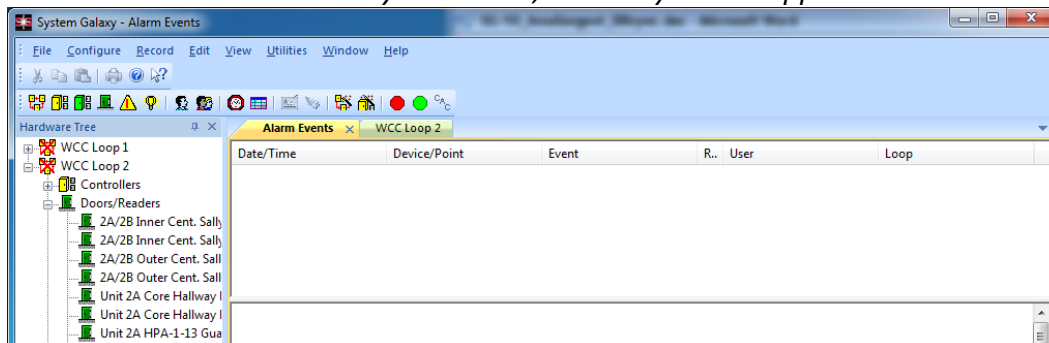

8.2 ADDING THE 'ASSA ABLOY IP READER' TYPE TO SYSTEM GALAXY

If the “ASSA ABLOY IP Reader” type is not present by default in the SG database, you must add it.



IMPORTANT: Add the **ASSA ABLOY IP Reader** type before adding the hardware to System Galaxy.



Reader Type Programming: the Reader Type Programming screen is a screen that is used to build the Reader Type pick list for the Reader Properties screen.



NOTE: System Galaxy will display (or unhide) specific programming options based on which Reader Type is selected in the Reader Properties screen (e.g. reader serial number field).

- ♦ To open the *Reader Types* screen from the SG Menu, select **Configure > Hardware > Reader Types**.
- ♦ If “ASSA ABLOY IP Reader” is not already in the [Description] list, you must manually add the name by typing **ASSA ABLOY IP Reader (without quotemarks)** into the [Description] field.
- ♦ Click the **[Add New]** button when the Reader Types screen opens.
- ♦ In the [Output format] droplist, choose ‘**Third-Party External**’
- ♦ Click **[APPLY]** button to save.

Reader Types Programming: Adding the Reader Type

Reader Types x

ID: 41

Description: ASSA ABLOY IP Reader

Output format: Third-Party External

Add New

Edit

Delete


Apply

Cancel


Build Default Types

8.3 ADDING THE 'DUMMY' LOOP/CLUSTER IN SYSTEM GALAXY

Add the 600 Loop/cluster before adding the access control panel:

- ◆ Click on the [Loop] toolbar button  to open the Loop/Cluster Programming screen;
{Or from the menu, select [Configure > Hardware > Loops/Clusters](#).}
- ◆ Click [Add New] when the Loop Properties screen opens.
- ◆ Type in a meaningful Loop name into the [Name] field. (You may wish to indicate the loop number or make the name refer to the ASSA IP Readers. Keep in mind that the SG Hardware tree sorts Loop names in ascending alphabetical order).
- ◆ Set [System Type] droplist to "600".
- ◆ Set [Connect using] droplist "No Connection".
- ◆ Click [Apply] to save settings.

Loop/Cluster Properties: Configuring the Loop

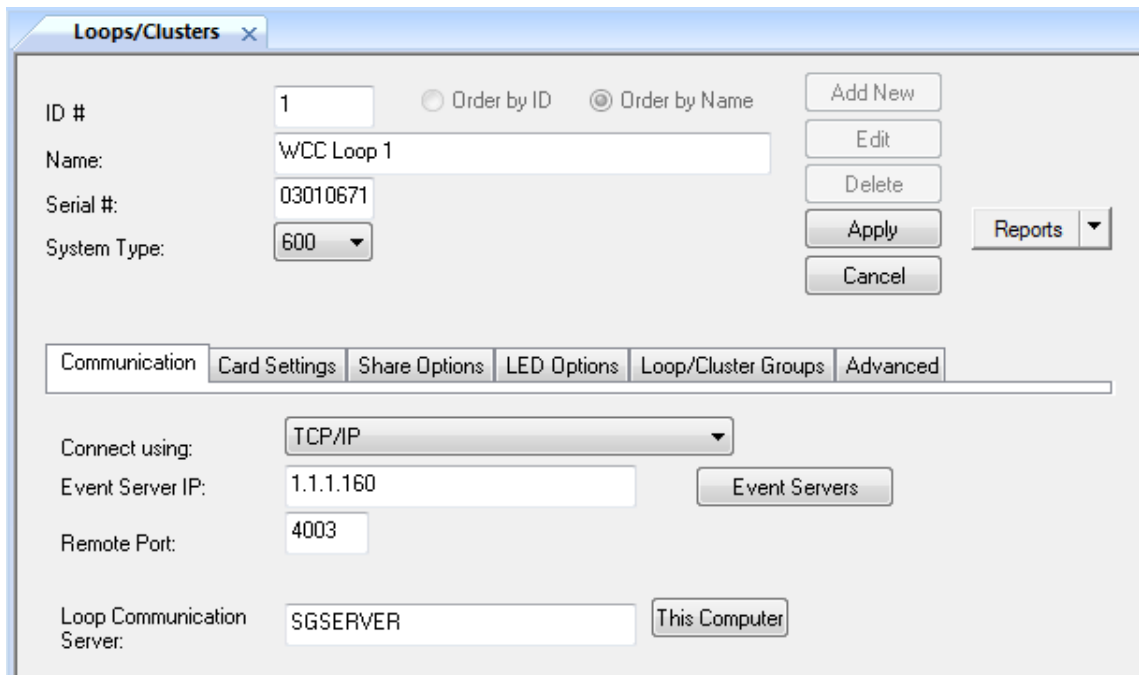

The screenshot shows the 'Loops/Clusters' configuration window. The 'ID #' field is set to 1, 'Name' is 'WCC Loop 1', 'Serial #' is '03010671', and 'System Type' is '600'. The 'Connect using' dropdown is set to 'TCP/IP', 'Event Server IP' is '1.1.1.160', 'Remote Port' is '4003', and 'Loop Communication Server' is 'SGSERVER'. The 'Communication' tab is selected, and the 'Event Servers' button is visible.

8.4 ADDING THE 'DUMMY' CONTROLLER AND DPI BOARDS IN SYSTEM GALAXY

Add the 600 Controller (access control panel) to the loop/cluster:

To open the Controller Properties screen: click on the Controller button on the toolbar,
{Or from the menu, select **Configure > Hardware > 600 Controller**}

- ◆ When the Controller Properties screen opens, **select the Loop/Cluster name** you just created in the previous step.
- ◆ **Click [Add New]** to add the controller.
- ◆ **Enter a user-friendly *descriptive* Name** for the control panel. The software automatically assigns a controller name – you can / should change that to a name that logically describes the location or purpose of the panel (i.e. Lobby controller, or East Wing, 1st floor, etc.) for administration and future maintenance purposes.
- ◆ **Click the [ADD BOARD] button:** and select the DPI OR DRM board type – adding as many as you need to support the number of readers you are adding. One DPI Board add two reader slots to the system.
- ◆ **Click [Apply]** to save the configuration.
- ◆ **Select the ASSA ABLOY IP Reader type if available (or choose a temporary default type until you can set the ASSA ABLOY IP Reader type in the Reader Properties screen).**

Controller Properties: Configuring a 635/600-series Controller

Cluster/Loop: Main Building

Controller ID: 1

Name: Cluster #: 1, Unit #: 1

Bypass loading: ☐

Order by ID ☐ Order by Name ☒

Buttons: Add New, Edit, Delete, Apply, Cancel, Reports

Tabs: Interface Boards, CPU Boards, Alarm I/O Groups, Options

Board/Section #	Description	Sections
2	Dual Reader Interface (600)	2
5	Dual Serial Interface Board	2
10	Dual Reader Interface (600)	2
16	Dual Reader Interface (600)	2

Buttons: Add Board, Edit Board, Delete Board, Section In Use, Section Not In Use, Get Board Info

8.5 CONFIGURING THE READER PROPERTIES IN SYSTEM GALAXY

❶ **IMPORTANT:** Carefully type the Serial Number of the IP READER correctly when entering it into the Galaxy Database. Reader synchronization is dependent on the reader serial number being correct.

To configure a Reader Port, open the Reader Port window. Follow the menu **selections Configure > Hardware > Reader Ports**, or click the **Doors/Readers** button on the toolbar.

- ◆ **Open the Reader Properties screen:** click on the Door button on the toolbar, {Or from the menu, select **Configure > Hardware > Reader Ports**}
- ◆ **Select the Loop/Cluster and Controller** that is assigned to your ASSA IP Reader.
- ◆ **Select the specific Reader from the droplist** that you are configuring.
- ◆ **Click the Edit button** to place the reader properties in edit mode.
- ◆ **You can change the Reader [Name] field as desired** (up to 65 characters) **to something that describes the reader or door/area it accesses** (i.e. Room 101; supply closet). The system mapping for that board is still displayed above the reader name field.
- ◆ **Select the 'ASSA ABLOY IP Reader' option in the [Reader Type] field will be disabled**, but it will display the format you assigned to this reader in the Serial Channel properties screen (PIM Wiegand or PIM ABA).
- ◆ **On the General Options tab, the actual Reader's serial number – BE CAREFUL TO TYPE THIS CORRECTLY!!**

Reader Properties: Configuring the ASSA IP READERS

The screenshot shows the 'System Galaxy - Reader Ports' configuration window. The 'Reader Ports' tab is active, showing a list of readers. A callout box highlights the 'Loop' field, which is set to 'GCS 10.4', and the 'Reader Name' field, which is set to 'Wifi Lock'. Another callout box highlights the 'Reader Type' field, which is set to 'ASSA ABLOY IP Reader'. A third callout box highlights the 'Door Supervision' field, which is set to 'No Supervision Resistors', and the 'External Reader Unique ID' field, which is set to 'NT311D5377SC05AA'.

Loop: GCS 10.4
Cluster: 001, Cont: 001, Brd: 2, Sect: 2-0
Reader Name: Wifi Lock
Reader Type: ASSA ABLOY IP Reader
Third-Party External

Door Supervision: No Supervision Resistors
External Reader Unique ID: NT311D5377SC05AA

8.6 ADDING A “TEST CARD” IN SYSTEM GALAXY

This section covers how to vet your installation and ability to update the IP Readers using the GCSASSASync application and ASSA Database synchronization. This section does not validate the scheduled synchronization



IMPORTANT: Remember to remove the ‘test card’ credential after the walk-test is completed.

IMPORTANT: You must have **completed programming the ‘dummy loop, controller, and DPI slots’**, as well as adding the **Reader serial number**, before you can grant access privileges to the test card.



Test Card Credential: is a credential that is added to the SG Database and given access privileges to the designated Reader(s) in order to validate that the reader is configured correctly and operating normally.



NOTE: The **keypad number** or **card code** must match the format (Wiegand or ABA) that the designated Reader is configured to support.

8.6.1 METHODS OF CAPTURING A TEST CARD CREDENTIAL IN SYSTEM GALAXY

This subsection provides information on:

- 8.6.1.1 **Capturing a card code** from a ‘Not in System’ event
- 8.6.1.2 **Capturing a card code** using an Enrollment Reader
- 8.6.1.3 **Manually adding** a new *keypad number* or *card number*
- 8.6.1.4 Full **step-by-step instructions** for manually adding a credential and access privileges.
- 8.6.1.5 Full **step-by-step instructions** for manually adding removing a test card.

8.6.1.1 CAPTURING A TEST CARD (CARD CODE) FROM A 'NOT IN SYSTEM' EVENT:



IMPORTANT: The Loop/Panel/Reader must be physically installed and configured into SG.

RECOMMENDED: Enroll a card that has never been added to the system.



NOTE: To trigger a '**Not in System**' event, the card must be presented at a reader where the card is not in the Galaxy Control Panel (controller). If the card is in the panel, a valid or invalid access event occurs.

1. Present the **test card** at a functioning reader that is physically installed at a Galaxy Access Control Panel.
2. Right-click the '**not in system**' event (in the SG Event screen) and choose the '**Add Card**' option from the *operator command menu*. (This automatically opens the *Cardholder Programming screen* and inserts your card number into the **[Card Code] field**.)

8.6.1.2 CAPTURING A TEST CARD (CARD CODE) FROM AN ENROLLMENT READER:



IMPORTANT: The card you are capturing does not need access to the Loop/Cluster being used for enrolling cards. This method requires the Galaxy Enrollment Reader to be properly installed and configured into the System Galaxy database.

RECOMMENDED: Enroll a card that has never been added to the system.


1. Open the Cardholder Programming screen.
2. Select the Card/Badge Settings tab
3. Place your mouse cursor inside the **[Card Code] field**
4. Present the **test card** at your Enrollment Reader.
5. RESULT: The SG software will insert the card number into the **[Card Code] field**.

8.6.1.3 MANUALLY ADDING A CREDENTIAL (CARD CODE – OR – KEYPAD CODE):

In this method you will manually program the card code or keypad code directly into the Card Code field.


TO ADD A NEW CARDHOLDER RECORD – FOLLOW THESE STEPS:

1. Open the Cardholder Programming screen click on the [Cardholder] toolbar button.
{Or from the SG menu, select **Configure > Cards > Cardholders**}
2. Click the cardholder **[ADD NEW]** button at the top of the screen.

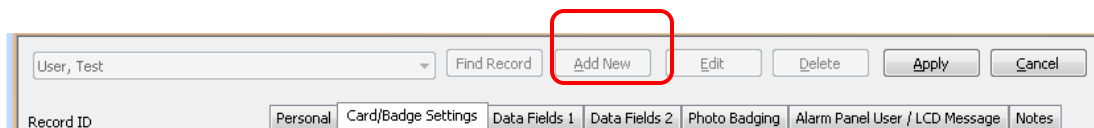

The screenshot shows the top toolbar of the Cardholder Programming screen. It includes a dropdown menu with 'User, Test', a 'Find Record' button, an 'Add New' button (highlighted with a red rectangle), an 'Edit' button, a 'Delete' button, an 'Apply' button, and a 'Cancel' button. Below the toolbar are tabs for 'Record ID', 'Personal', 'Card/Badge Settings', 'Data Fields 1', 'Data Fields 2', 'Photo Badging', 'Alarm Panel User / LCD Message', and 'Notes'.

3. Enter “TEST CARD” the **[Last Name]** field if adding a new record for the test card.
4. *Entering a first name is optional.*

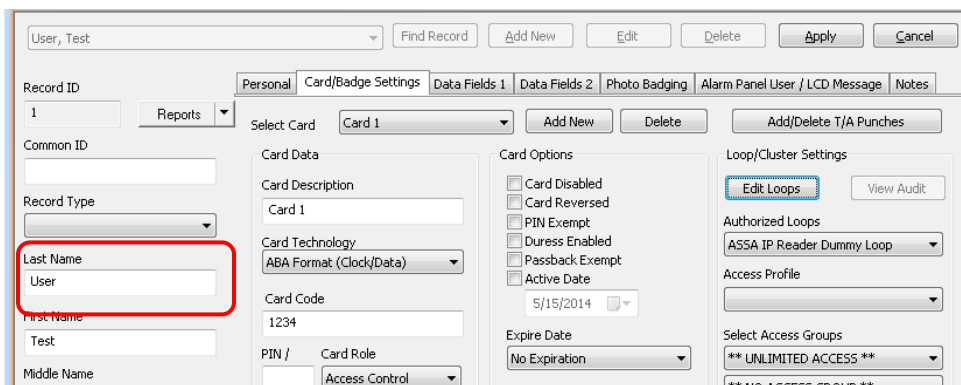

The screenshot shows the 'Personal' tab of the Cardholder Programming screen. The 'Last Name' field is highlighted with a red rectangle. The form includes fields for 'Record ID' (1), 'Common ID', 'Record Type', 'Last Name' (User), 'First Name' (Test), 'Middle Name', 'Card Data' (Card 1), 'Card Description' (Card 1), 'Card Technology' (ABA Format (Clock/Data)), 'Card Code' (1234), 'PIN / Card Role' (Access Control), 'Card Options' (Card Disabled, Card Reversed, PIN Exempt, Duress Enabled, Passback Exempt, Active Date), 'Loop/Cluster Settings' (Edit Loops, View Audit), 'Authorized Loops' (ASSA IP Reader Dummy Loop), 'Access Profile', 'Select Access Groups' (** UNLIMITED ACCESS **), and 'Expire Date' (No Expiration).

<< Instructions continue on the next page >>

5. Select the **Card/Badge Settings** tab to see the card programming fields.
6. Select the appropriate card type (Wiegand, ABA) from the **[Card Technology]** droplist.
7. Enter the card code into the **[Card Code]** field. *Note that if you are using ABA Keypad Readers, you can put the desired keypad number in the Card Code field (not the PIN field).*
8. Set the **[Card Role]** field to Access Control.

The screenshot shows the 'Card/Badge Settings' tab in a software application. The 'Card Data' section is highlighted with a red box. It contains the following fields:

- Card Description:** Card 1
- Card Technology:** ABA Format (Clock/Data)
- Card Code:** 1234
- PIN / Card Role:** Access Control

Other visible fields include 'Record ID' (1), 'Common ID', 'Record Type', 'Last Name' (User), 'First Name' (Test), and 'Middle Name'. The 'Card Options' section on the right includes checkboxes for 'Card Disabled', 'Card Reversed', 'PIN Exempt', 'Duress Enabled', 'Passback Exempt', and 'Active Date'. The 'Loop/Cluster Settings' section includes an 'Edit Loops' button and a dropdown for 'Authorized Loops' (ASSA IP Reader Dummy Loop).

9. Click the [Edit Loops] field and double-click the **dummy loop name** you created in the prior section.
 - TO ADD ACCESS TO ALL READERS ON THE DUMMY LOOP: In the first **[Access Group]** field, choose *****UNLIMITED ACCESS****.
 - TO ADD ACCESS TO ONLY ONE OR A FEW READERS ON THE DUMMY LOOP: In the last/fourth **[Access Group]** field, choose **PERSONAL DOORS**. When you select this option the Personal Doors button will appear and you can open that screen to see the list of IP Readers available. You can add one or several doors to the Personal Doors list in the middle of the screen.

IMPORTANT: Be aware that choosing an access schedule will still grant unlimited access at the IP Reader since the Galaxy schedules are governed by a Galaxy panel.

<< Instructions continue on the next page >>

10. Click **[APPLY]** button to save the card to the System Galaxy Database. (This card will have access to all the readers that are currently programmed on the “Dummy Loop” you added).

The screenshot shows the 'Card/Badge Settings' tab in the System Galaxy Database. The 'Apply' button is highlighted with a red box. The 'Loop/Cluster Settings' section is highlighted with a red box, showing 'Edit Loops' and 'Authorized Loops' (ASSA IP Reader Dummy Loop). The 'Select Access Groups' section is highlighted with a red box, showing four options: '** UNLIMITED ACCESS **', '** NO ACCESS GROUP **', '** NO ACCESS GROUP **', and '** NO ACCESS GROUP **'.

Once your card is saved to the SG Database,

1. You must manually synch up the ASSA Database by running the GCSSYNC application. See section 7.1 for instructions about manually executing the GCSSYNC.EXE.
2. Then manually synch IP Readers using the command card or command keycode (keypad readers) that the reader manufacturer supplies with the reader. See the reader manufacturer's documentation for this information.
3. When the synchronization is completed you can walk-test your loop by presenting the test credential you just enrolled into System Galaxy. User should be granted access into the door.
4. After walk-testing the readers, you can manually rerun the GCSSYNC.EXE per the instructions in section 7.1, to allow the events log to be transmitted to the System Galaxy database.

9 ABOUT ADDING & REMOVING ACCESS FROM CARDS / USERS

- ① **IMPORTANT:** Access is removed immediately from doors that Galaxy hardware monitors provided connectivity is maintained. The GCS DataLoader service will push out changes to Galaxy panels when connectivity is reestablished provided the service is running. Operator/Administrator can manually load any affected panels as desired.
- ① **IMPORTANT:** The ASSA ABLOY IP Readers are designed to request their updates upon a scheduled wake-up, which can vary from one site to another. Readers are typically set to wake and synch to their Assa Database at least once a day (to preserve battery life). Therefore, Galaxy recommends the **GCS ASSA SYNC Program** be scheduled to push updates to the Assa Database at least an hour before the Assa IP Readers are set to synchronize.
- ① **IF YOU NEED TO IMMEDIATELY REMOVE A USER OR CARD/CREDENTIAL FROM AN ASSA IP READER BEFORE THE NEXT SCHEDULED UPDATE**, you can manually run the **GCS ASSA SYNC Program** and then manually trigger a **reader wake-up** using the PIN command or Card command provided with your model reader.

To open the Cardholder Programming screen: click on the [Cardholder] toolbar button,
{Or from the SG menu, select **Configure > Cards > Cardholders**}

Cardholder Programming: Card/Badge Settings Tab

The screenshot shows the 'Card/Badge Settings' tab in the Cardholder Programming interface. The interface includes tabs for 'Personal', 'Card/Badge Settings', 'Data Fields 1', 'Data Fields 2', 'Photo Badging', 'Alarm Panel User / LCD Message', and 'Notes'. The 'Personal' tab is selected, showing a list of cards with 'Card 1' selected. Callouts provide the following information:

- You can de-activate entire cardholder (all cards) from the 'Personal Tab'. This is recommended for administrative removal of all user credentials (1).** (Points to the 'Personal' tab)
- You can disable an individual card, yet keep other cards active (1).** (Points to the 'Card Options' section)
- You set an activate date a for a future card(1).** (Points to the 'Active Date' field)
- You can set card expiration (1).** (Points to the 'Expire Date' field)
- You can add or remove access via the access profile (2).** (Points to the 'Access Profile' dropdown)
- You can add or remove access groups (2).** (Points to the 'Select Access Groups' dropdown)
- You add or remove individual door access, (2).** (Points to the 'Select Doors' button)

- (1) **GCS ASSA Sync will pick up changes the next time it runs.** Note: Only deactivated, disabled, or expired cards/users will be removed regardless of access points showing. Deactivating the user removes all access cards and readers. Disabling or expiring a card removes only that card and any associated readers. Other cards remain active if the user is active.
- (2) **Removing access to a reader point should be done carefully.** The card will remain active at any other access points unless it is disabled or expired. BE AWARE: A reader can be added to more than one **access group** as well as **personal doors**.